
Thanks very much for purchasing our Advanced ionic spraying machine. Please read carefully our User's Manual prior to use. After fully mastered it, you will see clearly its excellent performance and operational method.

Part 1. Functions:

It generates ionized vapor, which can facilitate blood circulation and the metabolic process, rinse the skin and supplement cell moisture. The skin can be improved to a delicate. White and tender new one by frequent use.

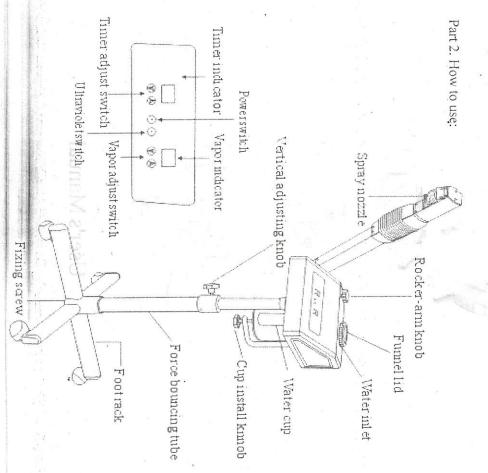

- (1) Fill the water cup with distilled water, within the limit of warning line.
- (2)Connect to electricity(220V), and push down the power switch. After about 8 minutes, water vapor begins to come out from the spray nozzle.

 Press the ultraviolet switch and ionizednepheloid vapor will be radiating
- (3) When the water surface falls below the heating wire, the machine will disconnect power automatically. If continuous use is expected please first plug off electricity. Empty the remaining water in the cup and clean up the cup before refilling water for subsequent use. Or, it may squirt water instead of vapor.
- (4) The proper position for using vapor is such to blow from the chin up and cover the whole face. Duration of use depends on the user's skin type.

Part 3. Cautions:

- (1) During installation and vertical tube adjusting, please hold the top of the tube and adjust to the right height slowly.
- (2) Don't put into the cup any chemicals or additives, or it will cause water squirting.
- (3) When using it. Please wait until the vapor spray is normal and then begin to point it at human body or spray slowly to the vapor spray is normal and then
- (4) After each use, empty the remaining water in the cup and clean it up. If there is any calcium oxide on the heating wire, remove it with soft metal brush or by soaking it for a night in vinegar solution.
- (5) Don't use detergent when cleaning the water cup.

Relevant technical data

Name	Advanced ionic spraying machine
Rated voltage: (V)AC 50Hz	220V-240V
Rated spraying amount: (ml/ Hour) 700	700 ged to a teat the second of the second o
Temperature at the steam vent: (°C) 90 (51) 8 15 (57811) 8 (1885)	90 विशेष अधिक समान विशेष विशेष १००१
Power: (W) Str. Str. Str. Str. Str. Str. Str. Str.	750 Miles of the vester surface (ATIS)
Cup volume: (Liter) which is a light of the 1.35 of the 19 word to the control of	oliggotus rowod issundarib
Net Weight:(Kilogram) 9.5	9.5 and clean up the cup before 1.5.1

Technical data:

Volt:220V-240V or Volt. 120 Vo contained . 2381 slocky additions

Frequency:50-60Hz Frequency: 60Hz

Power:797W Power:750W

must subject by electric nameplate.. Attention: This instruction all suit for above electrical appliance desctiption, the products

Electric shock prevention grade: Grade 110 also med a que en en en

Part 5. Accessories

One Main Machine & Astop 1968/ 8d libruitis A Sasti ii gi

A pair of iron cross Foot Racks, one cross Foot Fork

One Force Bouncing Tube, one Lift / Fall Tube

One Force Bouncing Tube fixing screw, one gasket

A copy of User's Manual के महुकतान ता मंत्रुवा हानों में क्षेत्रांनेहरू एवं 10 तथान

One certificate

WARNING:

- 1. This machine is not suit for the person who corporeity weakness, it guide by the person who had safe responsibility and safe use. recation slow or impediment pneuma(include children)use,unless
- 2. The children should be supervise that make sure they not play the machine.

Advanced ionic spraying

machine

User's Manual

Horse Fitting Method:

Firstly, combine horses 4A and 4B (there are upper and lower gaps available); then insert the cross opening of the cross fork (3); next insert the drawtube into the round hole of the cross fork; then fix them with horse fastening screws (5, 6); at last, insert the lift tube (1) into the round hole of the drawtube and screw down the height regulation knob.

