



IGNITION OF THE APPARATUS

Turn the timer knob (A) clockwise.

PROGRAMMING WORKING TIME

Set the working time from 0 to 60 minutes by turning the timer knob (A) clockwise. When the time has elapsed, the knob returns automatically to the "0" position. During operation of the apparatus, you can at any moment turn the knob counter clockwise to take it back to "0", thus using it as a switch.

PROGRAMMING OF TEMPERATURE

Set the desired working temperature by turning the knob (C) of the thermostat clockwise.

USE OF THE SWITCHES

Use the switches(D) in order to ignite or to extinguish every single lamp.

NOTE:

- The Company declines all responsibility for any injury to persons or damage to things caused by installation or assembly that has not been carried out in compliance with the General Warnings, or using supports and/or accessories other than those manufactured by us, or for any injury to person or damage to things caused by installation or assembly that have been carried out by non-specialized or non-authorized staff.
- In the case of the wall-mounted arm, the Company moreover declines all responsibility for injury or damage resulting from the unsuitability of any support made of masonry or other material.