


1) Hydraulic Lever Assembly

 Insert hydraulic lever(D) into the holes in the hydraulic(B) and insert two lever bolts(E) into the holes as shown.

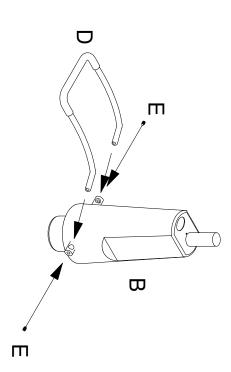

PARTS LIST*

Lever Bolt	2	Ш
Hydraulic Lever	1	D
Nut	4	С
Hydraulic	1	В
Base	_	➤
Description	Qty.	Part
LAU IO FIOI		

- *Open all boxes to check for parts before beginning assembly.
- **All bolt/washer sets are already in the brackets and footrest.


Tools required:



Allen wrench (included)

Hydraulic and Base Assembly

 Insert hydraulic(B) into the base(A) and screw four nuts(C) into the center as shown below.

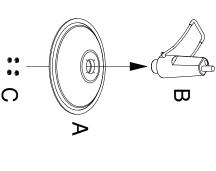

*Pump must be primed and lowe hydraulic ten to do so may result in before using. Failure times before use. premature hydraulic failure. To prime, raise