


1) Hydraulic Lever Assembly

 Insert hydraulic lever(D) into the holes in the hydraulic(B) and insert two lever bolts(E) into the holes as shown.

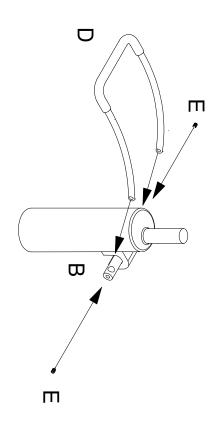

コヘコイク・・ウイ*

Е	D	С	В	Α	Part	
2	_	4	_		Qty.	
Lever Bolt	Hydraulic Lever	Nut	Hydraulic	Base	Description	PARIS LISI*

*Open all boxes to check for parts before beginning assembly.

**All bolt/washer sets are already in the brackets and footrest.


Tools required:

Allen wrench (included)

 \bigcirc

Hydraulic and Base Assembly

1) Insert hydraulic(B) into the base(A) and screw one bolt(C) into the center as shown below.

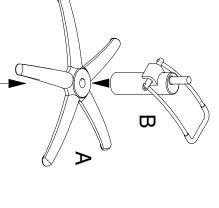

*Pump must be primed and lowe hydraulic ten before using. Failure times before use. premature hydraulic to do so may result in failure. To prime, raise