
# **Assembly Instructions**



# Reception Chair Model #2009

#### **Parts List\***

Part	Qty.	Description
Α	2	Frame
В	2	Bar
С	1	BackRest
D	1	Seat
Е	4	Thick Screw
F	4	Thin Screw
G	4	Flat allen screw

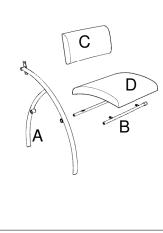

\*Open all boxes to check for parts before beginning assembly.

\*\*All bolt/washer sets are already in the brackets and footrest.

Tools required:


Allen wrench (included)



#### Step 1


Attach the two Bars to both Frames using the thick screws. Make sure that the welded on plates are pointing towards eachother (on the inside).

Note: It will make the entire process easier if you wait until the final step to tighten all of the screws fully.

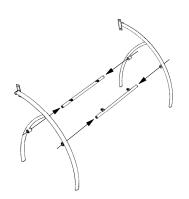

### Step 2

Next, attach the seat (D) to the Bars (B) using the thin screws.

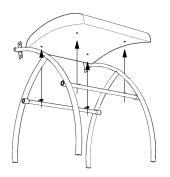

# Step 3

Now, attach the Back Rest (C) using the flat allen screws.



# **Final Step**

Now that all of the screws are in their places, tighten them. When tightening them make sure to tighten each screw just a little until the screws are snug.



Your chair is now complete!