


Assembly Instructions

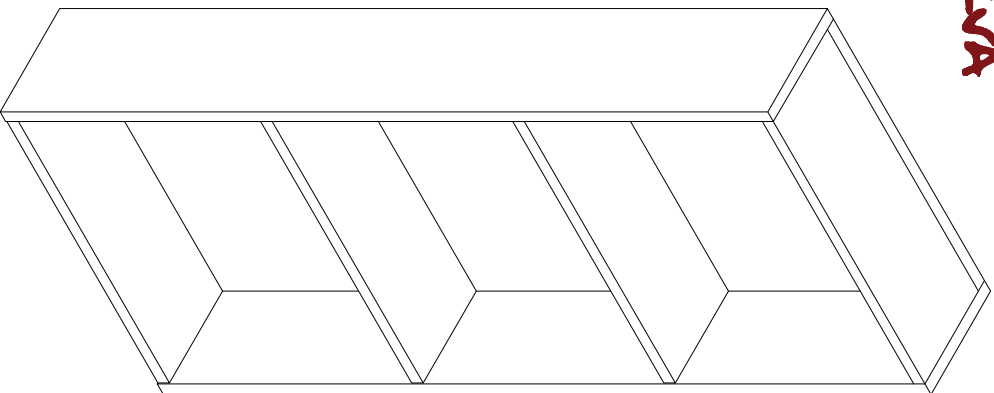

Important Safety Instructions

- Please read all instructions carefully before assembling this desk.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep these instructions for future use.
- Use only vendor supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-Assembly

- Remove all parts and hardware from the box. Place them on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- To avoid accidently discarding small parts or hardware, do not dispose any packaging or contents of the shipping carton until assembly is complete.
- Use the parts and hardware list on the right to identify and separate all of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.



Columbia Styling Station
Cabinet Section

Model #33350

Care Instructions

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.
- Hardware may loosen overtime. Periodically check to make sure all connections are tight. Re-tighten if necessary.

PARTS LIST**

Part	Qty.	Description	Sketch
A	26	Cam Lock Set	
B	22*	Wooden Dowel*	




* Dowels may already be attached to wood panels

**Open all drawers and boxes to check for parts before beginning assembly.

Tools required:
Phillips-head screwdriver
(Not included)


Components: Label - (Qty) - Description

01 - (1) - Back Panel	04 - (2) - Shelf Panels
02 - (1) - Top Panel	05 - (1) - Right Side Panel
03 - (1) - Bottom Panel	06 - (1) - Left Side Panel

Using a cam lock			
------------------	----------------------------------------------------------------------------------	----------------------------------------------------------------------------------	----------------------------------------------------------------------------------


Step 1

- 1) Screw cam screws (A) into the back panel as shown.
- 2) Insert wood dowels (B) into center holes as shown.
- 3) Slide top and bottom panels over cam screws and dowels, then secure the panels using the cam locks.



Step 2

- 1) Screw cam screws (A) into the right panel as shown.
- 2) Insert wood dowels (B) into remaining holes as shown.
- 3) Slide cam screws and dowels into the sides of the top, bottom, and shelf panels, then secure the panels using cam locks.



Step 3

- 1) Screw cam screws (A) into the left panel as shown.
- 2) Insert wood dowels (B) into remaining holes as shown.
- 3) Slide cam screws and dowels into the sides of the top, bottom, and shelf panels, then secure the panels using cam locks.

