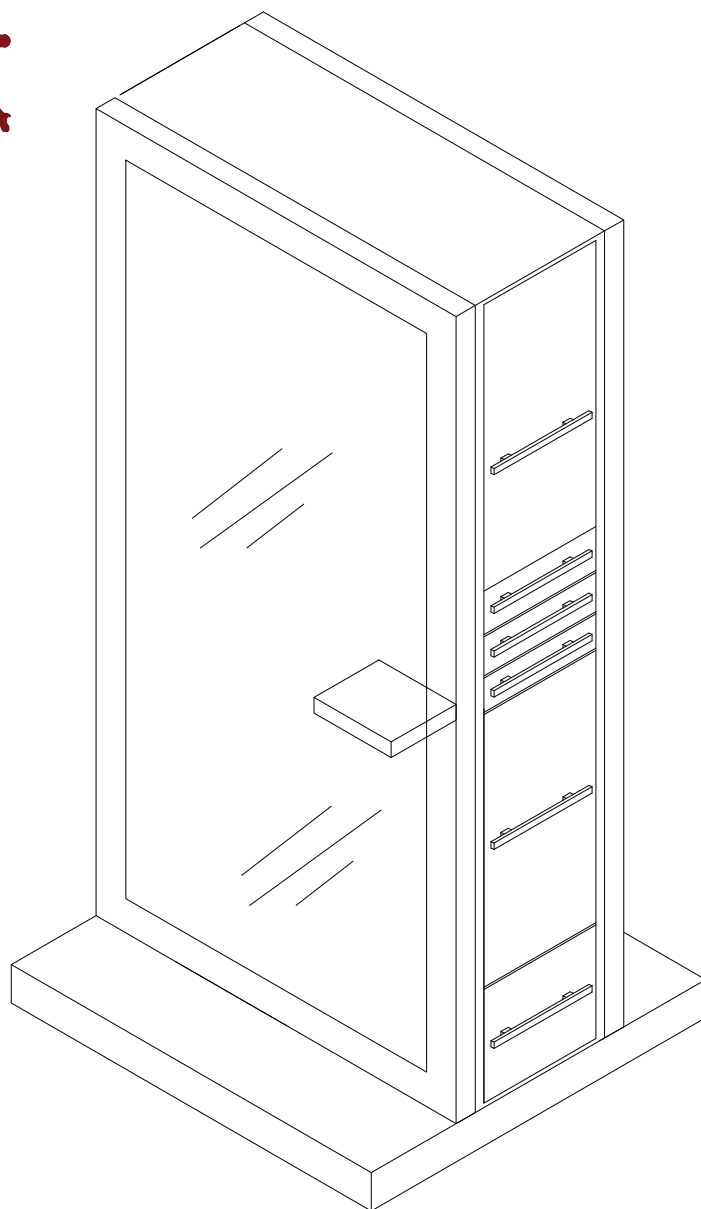




Assembly Instructions



Double-sided Icon Styling Station

Model #3378

PARTS LIST**

Part	Qty.	Description	Sketch
A	4	Short Allen bolts	
B	4	Medium Allen bolts	
C	26	Long Allen bolts	
D	32	Washers	
E	4	Short bolt anchors	
F	12	Handles	
G	24	Handle screws	
H	10	Appliance rings	

****Open all drawers and boxes to check for parts before beginning assembly.**

Tools required:

Large Allen wrench (included)

Small Allen wrench (Included)

Phillips-head screwdriver (Not included)



Components (Label - Description)

1 - Base

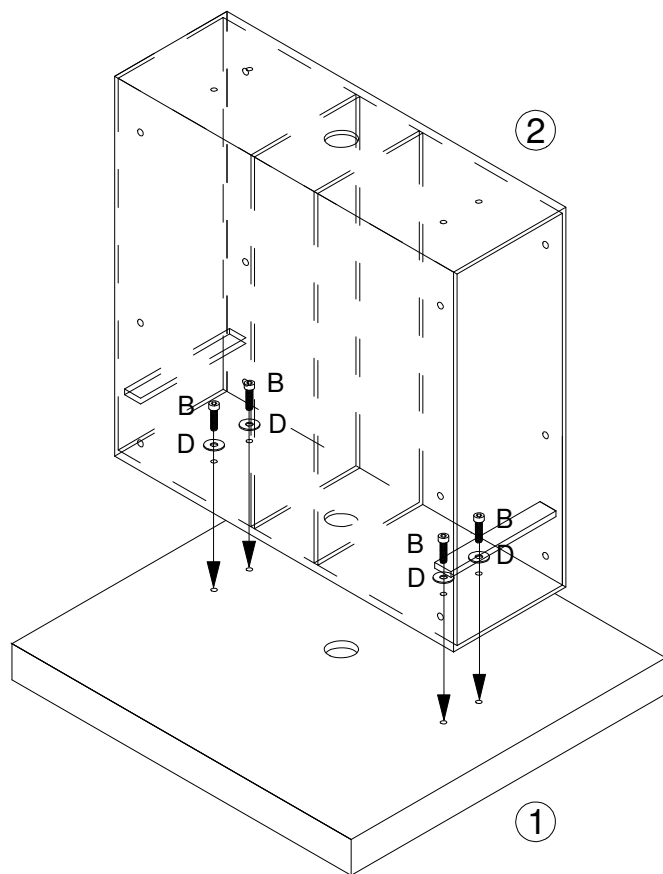
2 - Bottom cabinet section



3 - Top cabinet section

4 - Mirror panel

1 - Mounting bottom cabinet section

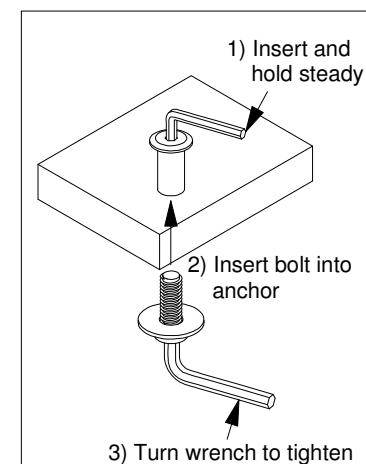
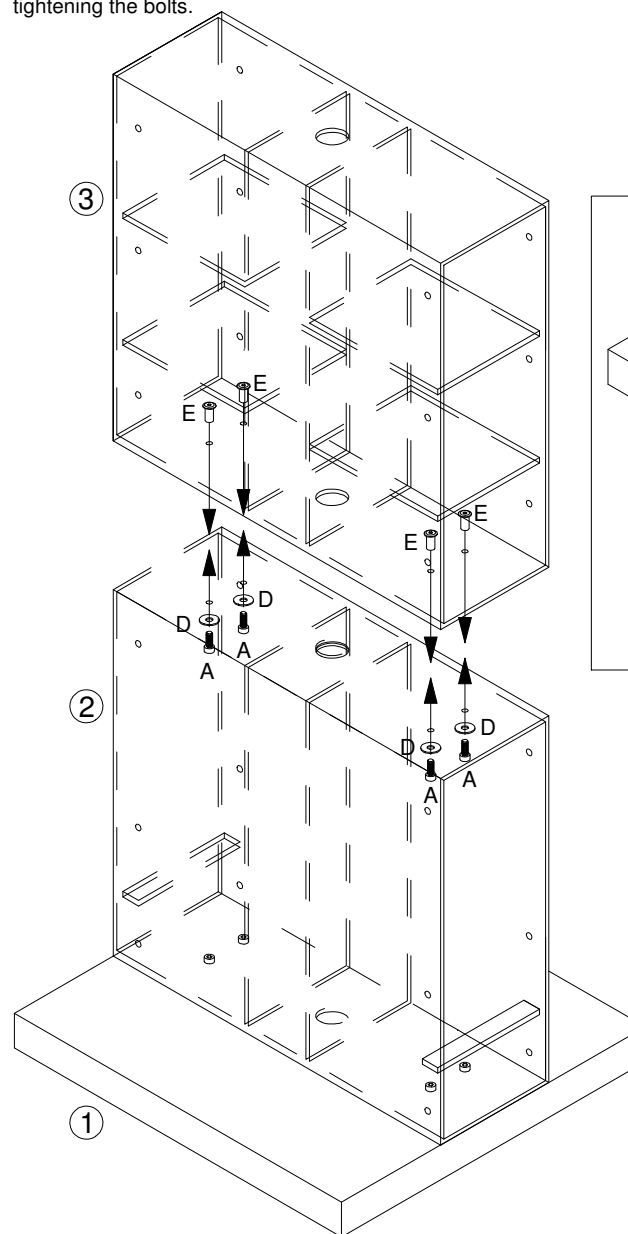
- 1) Remove all the drawers from the bottom cabinet section (2) by pressing the black release tabs in the glides (one up, one down) and pulling. Lay drawers out in proper order for replacement.
- 2) Set the bottom cabinet section (2) on top of the base (1), aligning the 4 small holes in each.
- 3) Secure the bottom cabinet section (2) to the base (1) using the 4 medium Allen bolts (E) and 4 washers (G) as shown.






B x4 
D x4 

3 - Mounting the top cabinet section

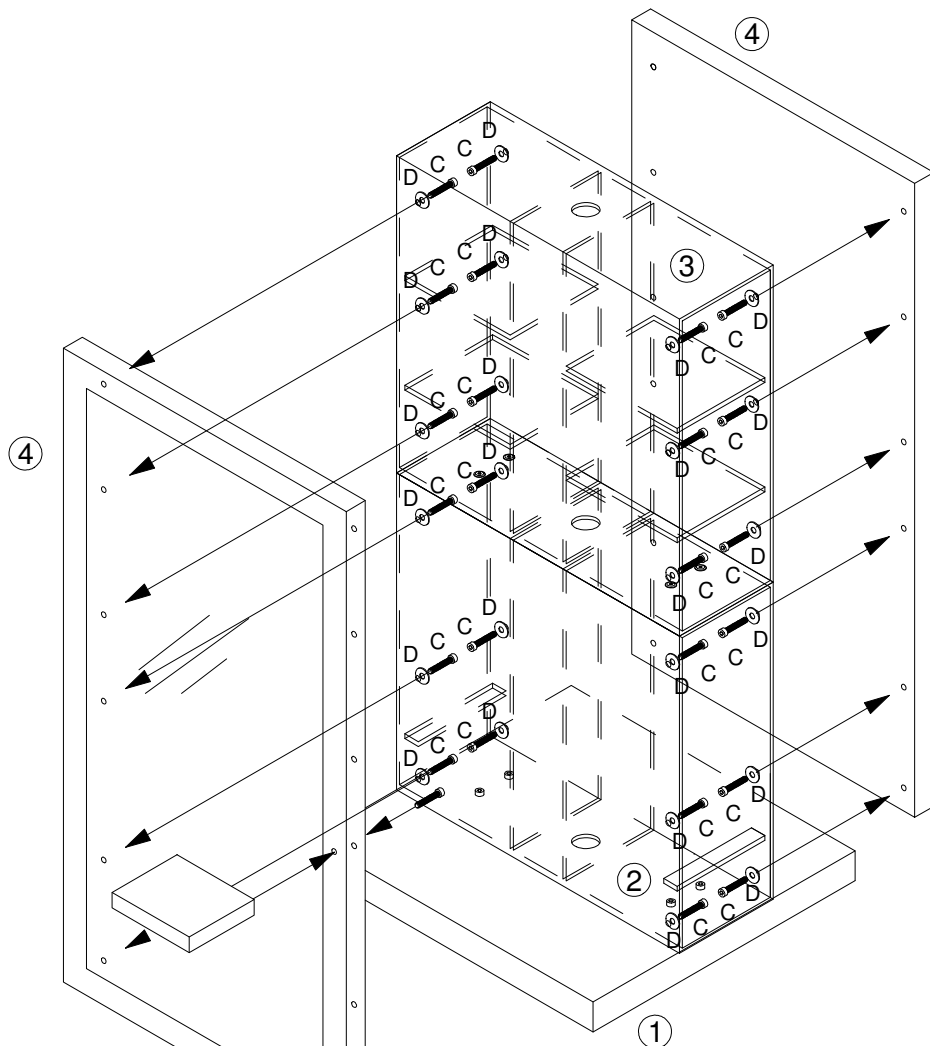
- 1) Remove all the drawers from the top cabinet section (3) by pressing the black release tabs in the glides (one up, one down) and pulling. It is not necessary to remove the doors from the upper section. Lay drawers out in proper order for replacement.
- 2) Set the top cabinet section (3) on top of the bottom cabinet section (2), aligning the 4 small holes in each.
- 3) Drop the 4 short bolt anchors (H) into the holes in the bottom of the top cabinet section (3) and secure by screwing in the 4 short Allen bolts (D) with washers (G) upward through both cabinet sections into the anchors. Use the small Allen wrench to hold the anchors in place while tightening the bolts.





A x4 
D x4 
E x4 

4 - Mounting the mirror panels

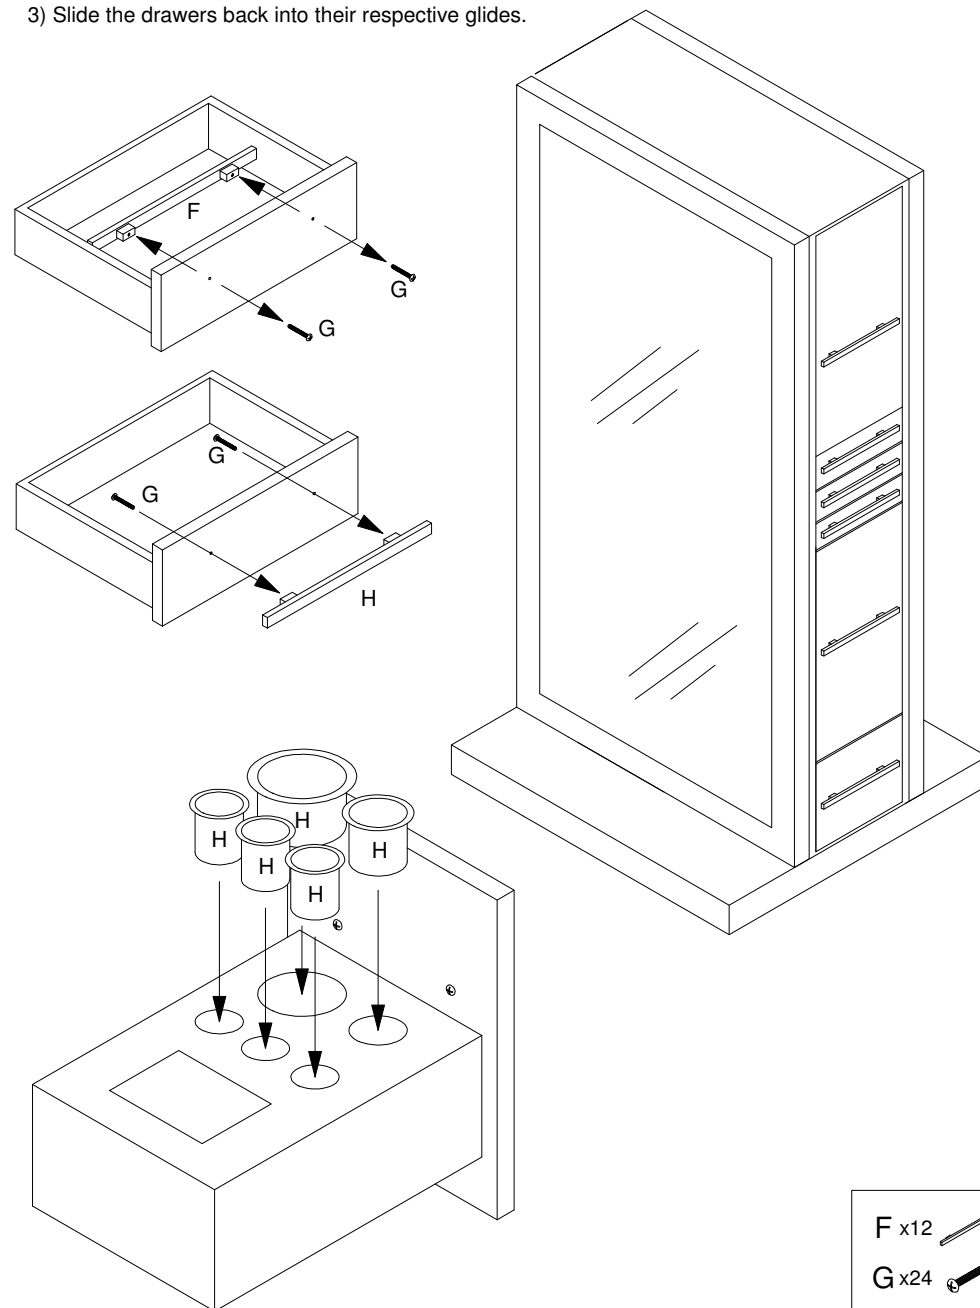
- 1) Rotate the front mirror panel (4) such that the holes in the back of the panel are aligned with the holes in the front faces of the bottom and top cabinet sections (2, 3).
- 2) Attach the Shelf to the mirror panel using a long allen bolt (F). Do this for both sides.
- 3) Anchor the front mirror panel to the cabinets using the long Allen bolts (F) and washers (H).
- 3) Repeat steps 1 and 2 for the rear mirror panel (4), using the same configuration of bolts and washers.



C x24 
D x24 

5 - Replacing the drawers

- 1) For shipping, the drawer handles (I) are attached to the insides of the drawer faces. Using a Phillips-head screwdriver, remove the 2 screws (J) in each and reattach the handles on the front of the drawers.
- 2) Drop the metal appliance rings (K) into the holes in the appliance drawers.
- 3) Slide the drawers back into their respective glides.



F x12 
G x24 
H x10 