




Assembly Instructions

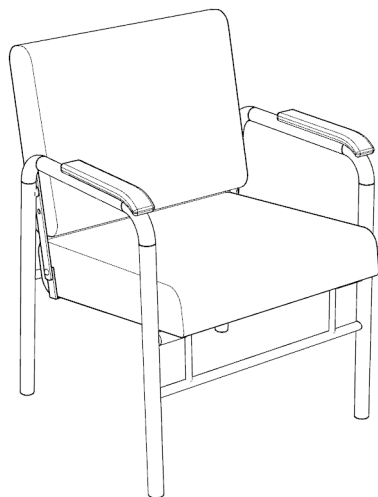


Auto Recline Shampoo Chair Model #5530 / #5528

Parts List*


Part	Qty.	Description
A	2	Legs
B	1	Bar
C	1	Bar assembly
D	1	Back Cushion
E	1	Seat Cushion Assembly
F	6	Allen Screws W/ Washers
G	4	Allen Screws
H	4	Rings
I	2	Plastic Washer

*Open all boxes to check for parts before beginning assembly.


- 1) Locate one of the Legs (A), the Bar Assembly (C), the Bar (B), and the Allen Screws W/ Washers.
- 2) Slide 2 of the rings onto one of the ends of the Bar assembly. Then insert the bar assembly and the Bar into the given holes.
- 3) After this, use the allen screws with washers attach the two pieces.

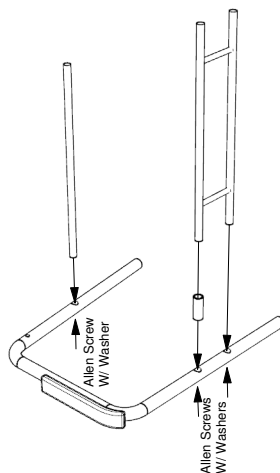

- 6) Now Slide the Seat Cushion and Back Cushion Assembly into the hole in the first leg. Make sure that the front of the chair is facing the side with the two bars.

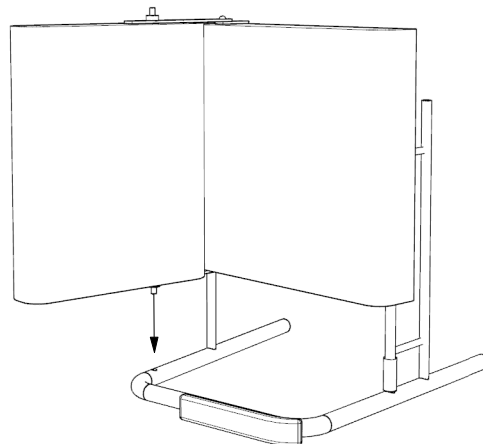

- 4) Locate the Back Cushion (D) and the Seat Cushion Assembly (E), the Allen Allen Screws (G) and the two Plastic Washers (I).
- 5) Attach the two bars on each side of the Seat Cushion Assembly (E) to the Back Cushion (D) by screwing them into the cushion with the Allen Screws.

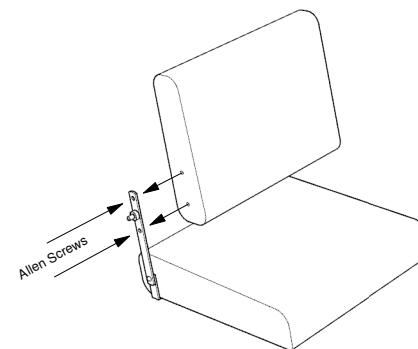

- 7) Now repeat steps 1,2,and 3 for the other Leg.

