


Assembly Instructions

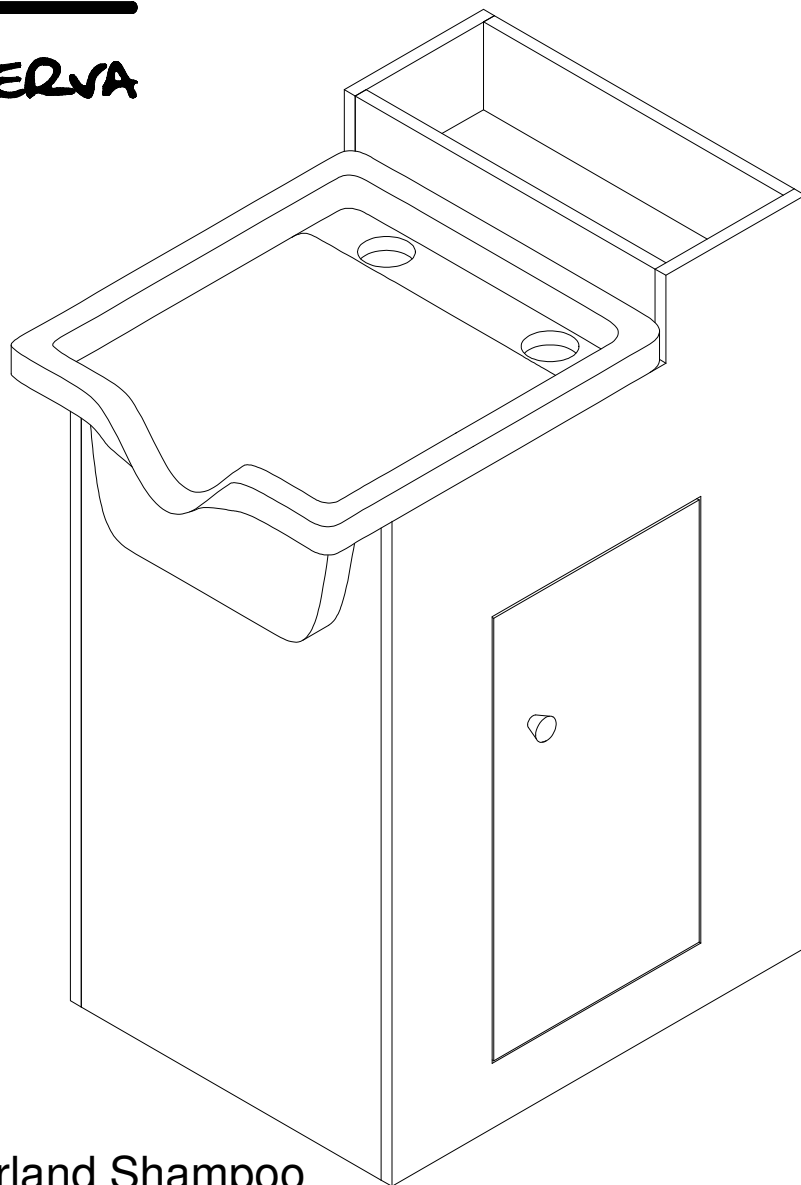

Cumberland Shampoo
Cabinet

Model # 5547

Cumberland bowl (#5560) with
mounting hardware sold separately

PARTS LIST*

Part	Qty.	Description	Sketch
A	20	Cam screw and lock	
B	9	Wood dowel**	
C	1	Handle	
D	1	Handle screw	
E	14	Wood screw	
F	2	Hinge	
G	1	Metal door stop	
H	1	Bowl bracket (Included w/ bowl)	
I	1	Stabilizer bolt (Included w/ bowl)	
J	1	Stabilizer nut (Included w/ bowl)	
K	3	#8 x 5/8" wood screw (NOT included)	




Phillips-head screwdriver required (+ drill recommended).
 *Check inside all boxes for parts before beginning assembly.
 **Dowels may already be attached to components.

Components (Label - Description)

1 - Cabinet back
 2 - Cabinet front
 3 - Well shelf
 4 - Well cover
 5 - Cabinet right side


6 - Cabinet left side
 7 - Cabinet door
 8 - Door mount
 9 - Bowl (sold separately)

Using a
cam lock

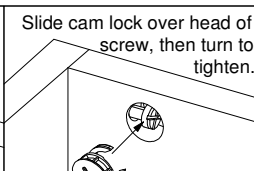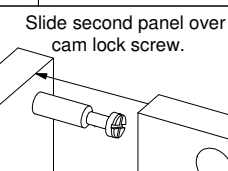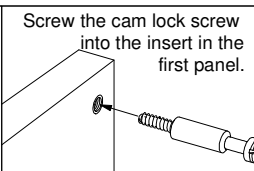


1 - Setting the door (1 of 2)

- 1) Screw 3 cam screws (A) and insert 2 dowels (B) into the right side panel (5) near the door cutout as shown.
- 2) Slide the door mount (8) over the screws and dowels with the cam lock holes facing away from the door cutout, then secure with 3 cam locks (A).

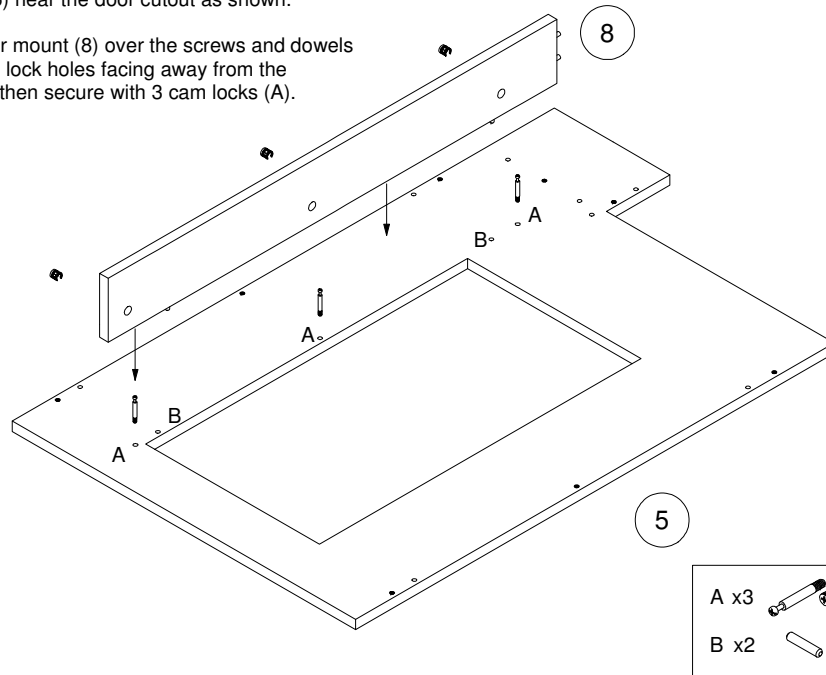


2 - Setting the door (2 of 2)

- 1) If not already flat, lay the side on a flat surface (use a towel to protect the finish if necessary) and center the door (7) inside the cutout in the right panel (5).
- 2) Drop the hinges (F) into the cutouts in the door and secure each hinge to the door first and then the door mount with 6 screws (E) per hinge.
- 3) Using 2 screws (E), secure the metal door stop (G) to the right side panel (5) so that it is centered on the side of the door cutout and hangs over the edge of the cutout.
- 4) Once fully assembled, remove the cam locks from the door mount and carefully pull the door mount with attached door out of the right side panel. It will be reattached later.

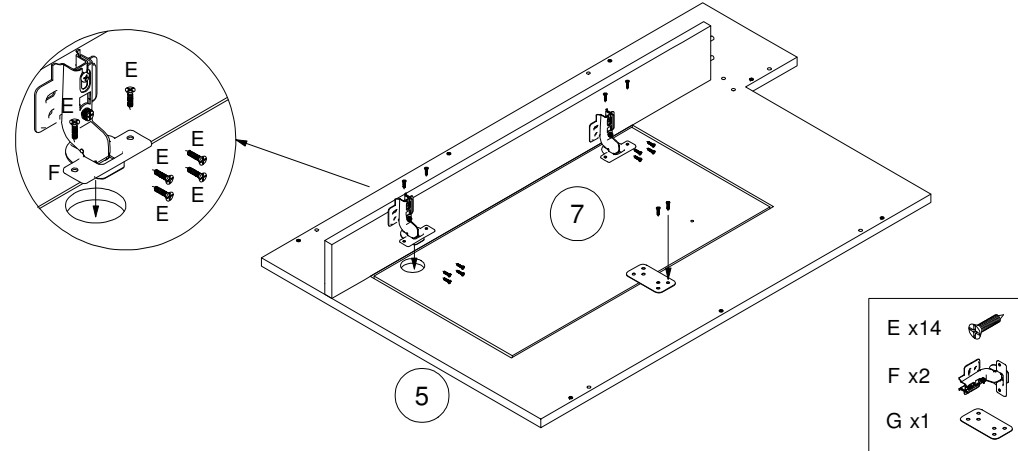


3 - Assembling the bottle well

- 1) Find the back panel (1), the well shelf (3), and the well front (4), and insert 2 cam screws (A) into the back and well cover as shown, with 1 dowel (B) in between. Dowels may already be in the well shelf.
- 2) Place the shelf over the screws in the back panel and the well front such that the top of the back panel and the well front are even with each other and the cam lock holes face down.
- 3) Secure with 4 cam locks (A).

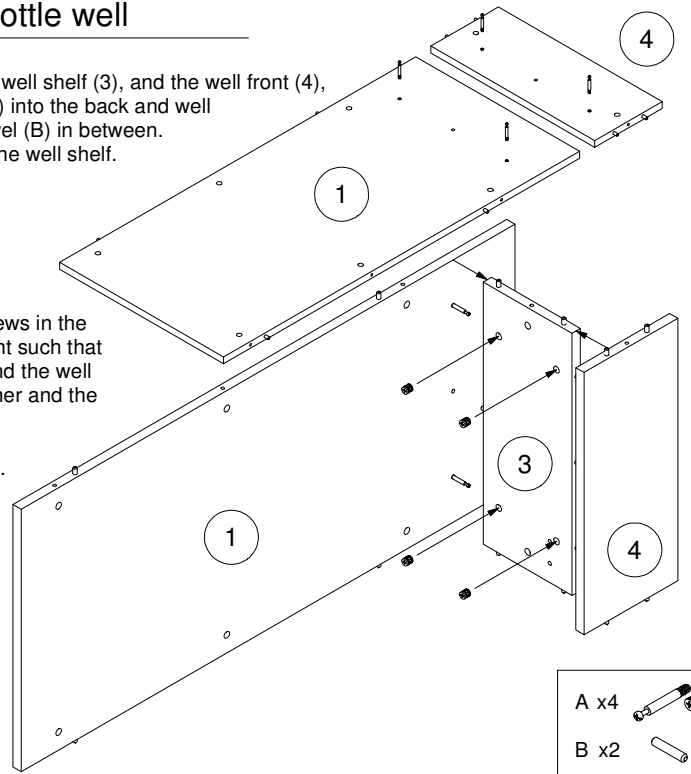


4 - Final assembly (1 of 3)

- 1) Screw the remaining 8 cam screws (A) and 8 dowels (B) into the right side panel (5) as shown. Dowels may be in the front panel and bottle well assembly already.
- 2) Stand up the bottle well assembly and the door with the mounting board, and insert the 2 dowels (B) in the top of the door mount into the two holes in the bottom of bottle well shelf.

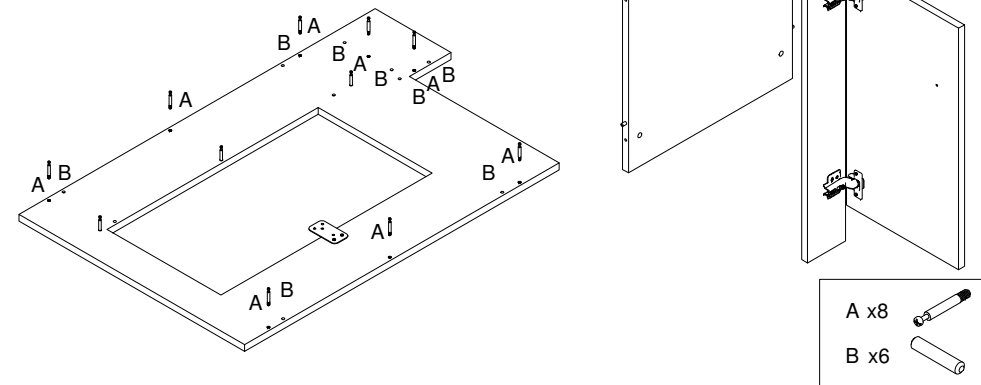


5 - Final assembly (2 of 3)

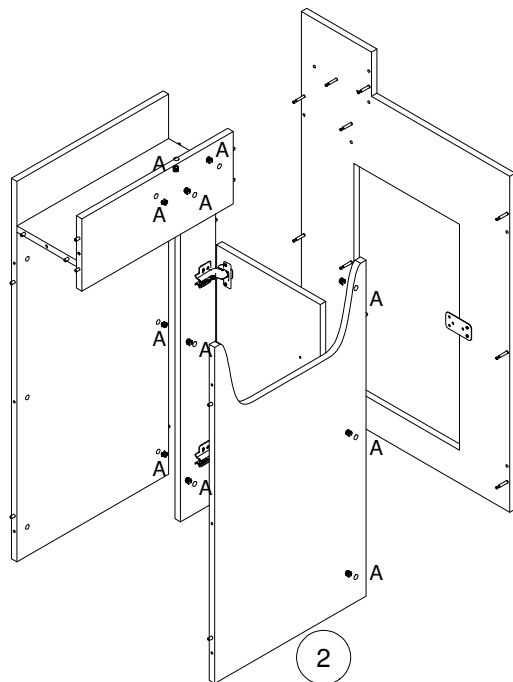

- 1) Align the bottle well with the cam screws and dowels in the right side panel, then secure with 5 cam locks (A) in addition to the 3 cam locks removed in step 3.
- 2) Secure the front panel (2) to the side panel with 3 cam locks.

A x8 (+3)

6 - Final assembly (3 of 3)

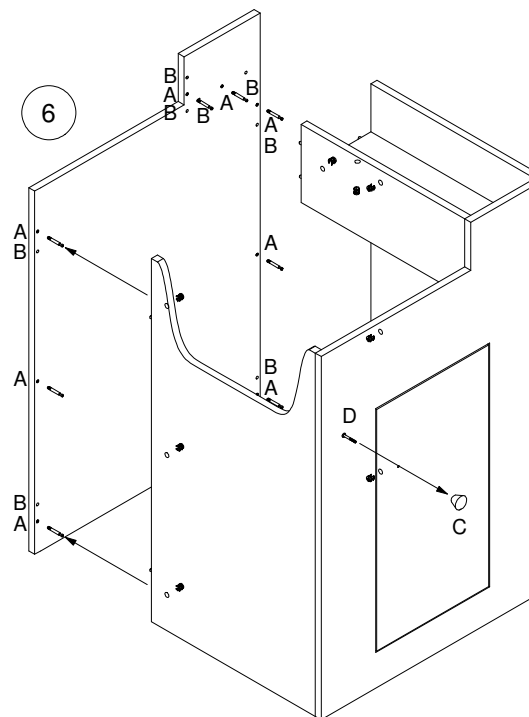


- 1) Insert 8 cam screws (A) and 8 dowels (B) into the left side panel (6) as shown.
- 2) Align the left panel with the assembly from step 6 and slide the screws and dowels into the respective insert points in the assembly. Secure with 8 cam locks (A).
- 3) Secure the handle (C) to the door from behind using the handle screw (D).

A x8
B x8
C x1
D x1


7 - Bowl installation (1 of 2)

- 1) Mount the bracket to the front face of the bottle well as shown in the diagram below.
- 2) Screw the stabilizer nut (J) onto the stabilizer bolt (I), then screw the bolt into the single raised hole.

Measuring from the edges of the bottle well front panel (not the cabinet sides) mark the front of the bottle well as shown.

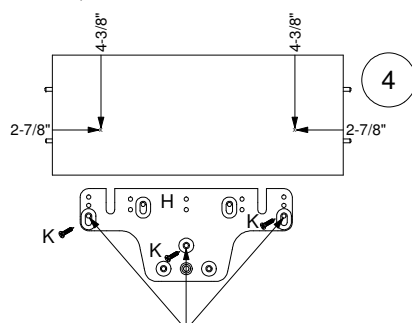

Align outermost holes in bracket with marks, secure with the #8 x 5/8" wood screws (K, not included) as shown.

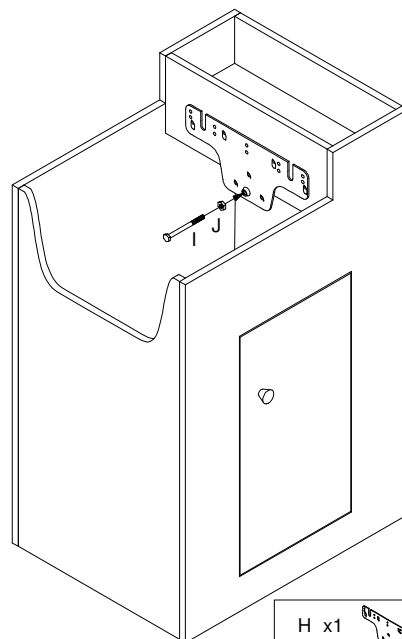

H x1
I x1
J x1
K x3

8 - Bowl installation (2 of 2)

- 1) Slide the hook points on the back of the Cumberland Shampoo Bowl (9) into the notches in the mounting bracket.
- 2) Through the access panel, adjust the stabilizer bolt so that the bolt head is close to but not touching the bowl (~1/8"), then hand-tighten the stabilizer nut to the bracket to lock the bolt in place.
- 3) Get a licensed plumber to make all necessary connections and test the unit. See the instructions included with the bowl for proper installation.

