





MINERVA

Assembly Instructions

For Minerva Beauty Callaway and
Cumberland Shampoo Bowls.

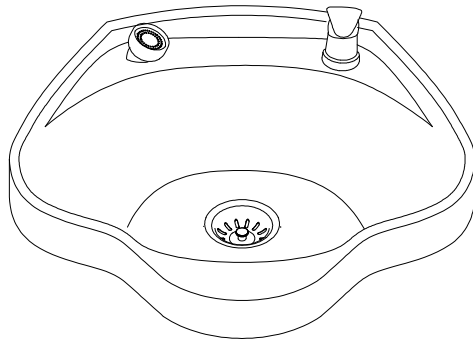




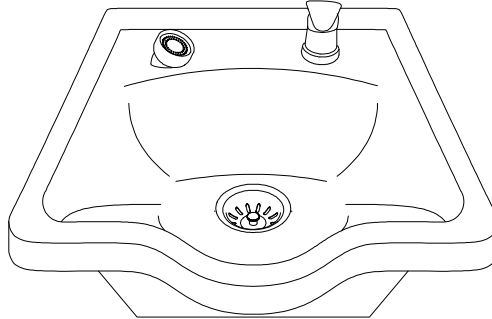





Callaway Shampoo Bowl
Model 5565



Cumberland Shampoo Bowl
Model 5560

Parts List

Cumberland Bowl - OR - Callaway Bowl	1x - OR - 1x		Strainer Basket	1x	
Valve	1x		Drain	1x	
Faucet Washer	1x		Rubber Washer	2x	
Mounting Bracket	1x		Drain Cover	1x	
Bracket Screws	5x		Brass Locknut	1x	
Camber Bolt	1x		Tail Pipe	1x	
Camber Nut	1x		Tail Washer	1x	
			Brass Slipnut	1x	

!! Safety and Warranty Information !!


A LICENSED PLUMBER MUST PERFORM ALL INSTALLATION
FOR PLUMBING AND ALL PLUMBING-RELATED EQUIPMENT.
FAILURE TO DO SO WILL VOID THE WARRANTY.

AT NO TIME SHOULD ANY PRODUCT CONTAINING BLEACH OR
BARBICIDE BE USED TO CLEAN OR SANITIZE ANY OF THE
SHAMPOO SINKS. SUCH PRODUCTS MAY CAUSE THE
BREAKDOWN OF SEALS AND RESULT IN LEAKING.

DOCUMENTATION OF INSTALLATION BY A LICENCED PLUMBER
MUST BE PROVIDED TO MINERVA BEAUTY, INC.
FOR ALL PLUMBING RELATED WARRANTY ISSUES.

WWW.MINERVABEAUTY.COM/MAINTENANCE.HTM

1 - Bracket Installation

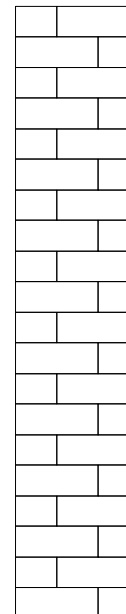


Align the bracket against the wall such that the top of the bracket
is approximately 3' (36") off the floor.

Use the 5 included screws as shown to affix the bracket to the wall.

Screws should be anchored into studs where available, or anchors
for the appropriate material otherwise (not provided).


Use the 5 screws for the
holes shown here.

Screw the camber nut over the bolt,
then the bolt into the bracket .

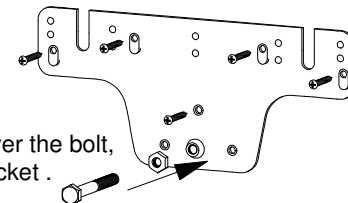


2 - Drain Installation

1. Set strainer basket inside drain.
2. Set drain into sink, using plumber's putty to create a watertight seal.
3. Place rubber washer on the upper lip of the drain cover (only 1 required).
4. Slip drain cover over drain threads.
5. Screw the locknut onto the drain threads, larger end up, and tighten it all the way so it presses the drain cover and washer against the bowl and prevents the drain from moving.

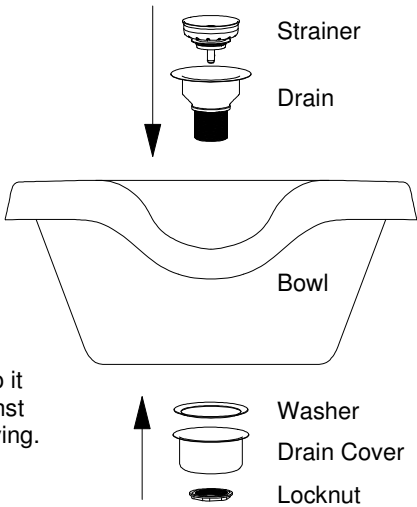


3 - Tail Pipe Installation

1. Insert the small end of the tail washer into the end of the tail pipe with the lip.
2. Slide the slipnut over the tail pipe and screw it onto the threads on the drain.

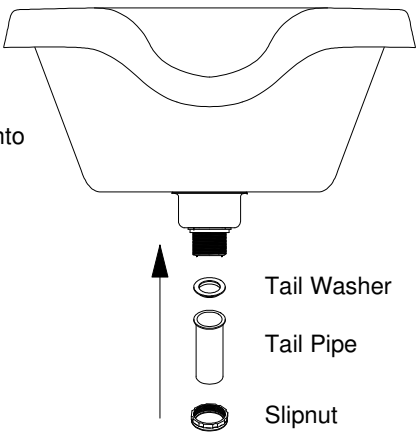


4 - Mounting the Bowl

1. Hang the bowl over the bracket, aligning the notches in the bracket with the hooks in the back of the bowl (A + B).

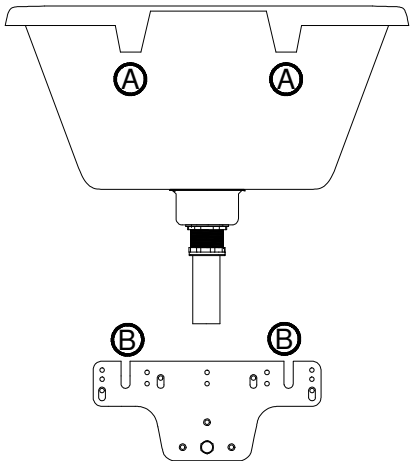

2. Adjust the camber bolt in the bracket such that there is about 1/8" between the bowl and the bolt.

3. Holding the bolt steady, tighten the nut against the bracket using the included wrench.

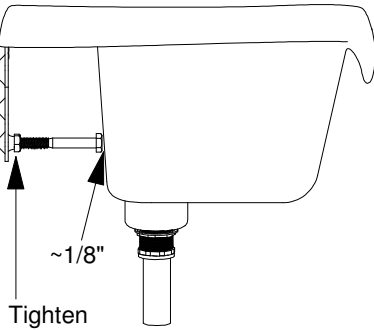

5 - Valve and Hose Installation

1. Unscrew nut to lower
2. Slide washer over pipes
3. Tighten nut to secure valve
4. Attach hose to valve

1. Drop the valve through the right-hand hole in the bowl.
2. Unscrew the nut on the threaded pipe to make room for the washer.
3. Slip the washer over the pipes, then tighten the bolt back up to secure the valve.
4. Drop the hose through the left-hand hole in the bowl, and screw the end of the hose onto the threaded pipe on the valve.