


Assembly Instructions

Avant Backwash Model #5869




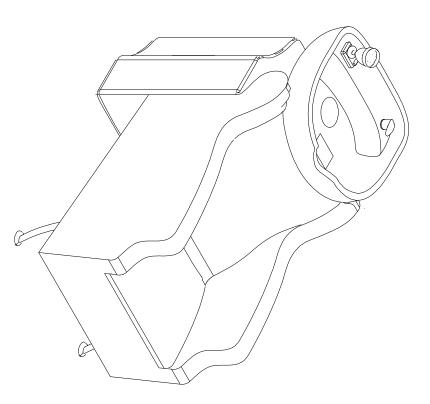

Chair Top (1x) - A



Sink and Support (1x) - B

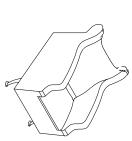



Assembly

1) Insert chair top into the holes on the front of the sink and support by using the hooks on the back of the chair as shown below

