


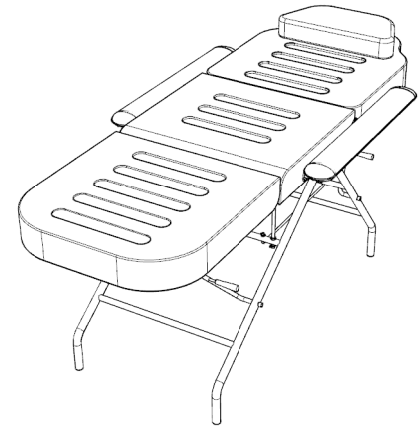


Facial Bed

Sku: 8832




Parts List


A

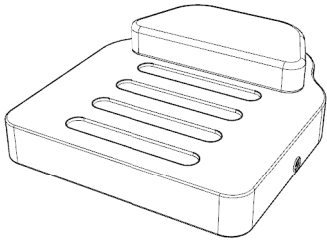


B

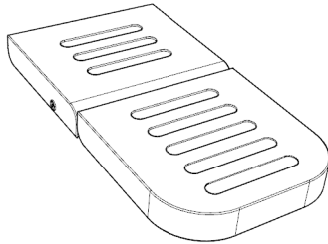


C

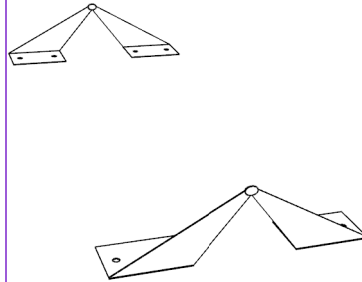


D

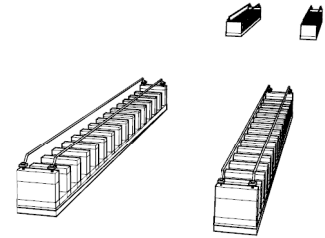


E

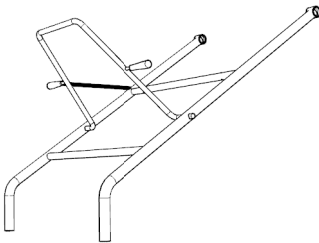


F

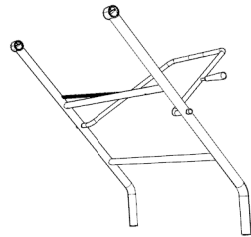


G




H



I

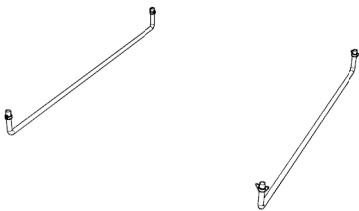

J

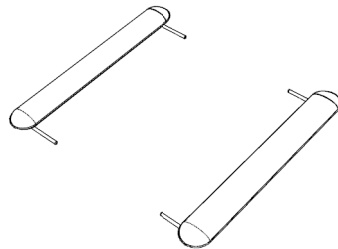

A

Head Cushion

B

Middle and End Cushion

C

Cushion Hinges (2)

D

Adjustment Grooves w/rails (4)

E

Long Leg Set

F

Short Leg Set

G

L-shaped Rods (2)

H

Leg Anchor Bar

I

Support Bars (2)

J


Arm Rests (2)

We thank you for your business and hope that this product will meet all your expectations!

If there is any confusion please contact Minerva's customer service department at: 888-332-0123 and we will be happy to answer any questions.


1

Lay the cushions face down on the floor.
Remove the eight bolts for the hinges and the eight bolts for the adjustment grooves.
Line the hinges shown up to the holes the bolts came from.
Screw the bolts through the hinges back into the holes.
Do the same for the adjustment grooves.

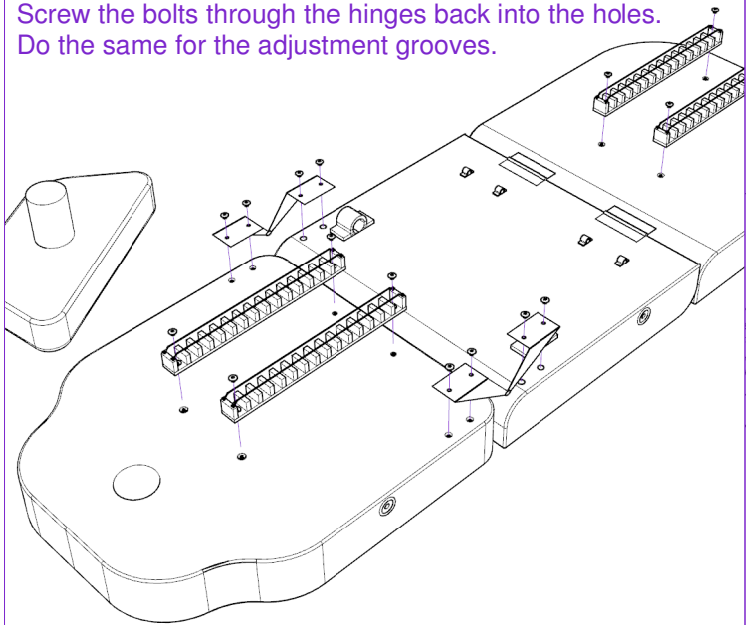

Now that the bed is connected, we can start attaching the frame.


2

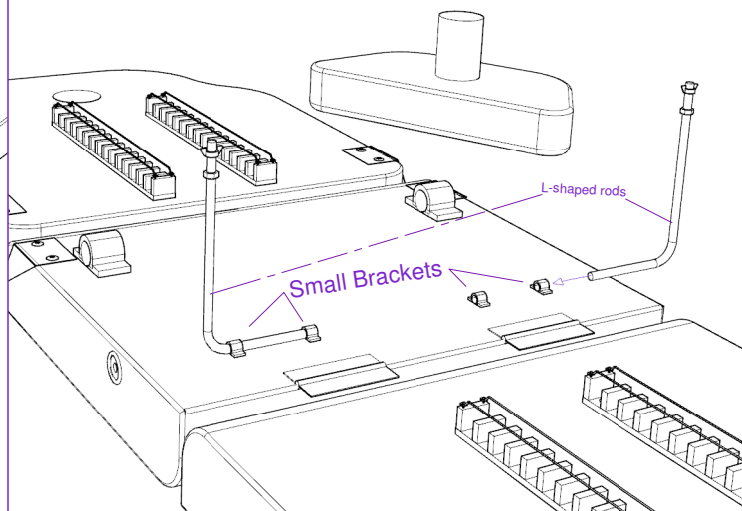


Slide the **SHORT END** of the L-shaped rods into the smaller brackets on the middle cushion. The long end of each rod should have one hex nut and one wing nut. For the next step, remove the **WING** nut but leave the **HEX** nut screwed down the rod toward the cushion.

3

Take the long set of legs and slide them over the L-shaped rods. Slide the leg frame all the way down until it rests on the hex nut on the L-shaped rods. Now screw the wing nuts back on the end of the L-shaped rods to secure the legs.

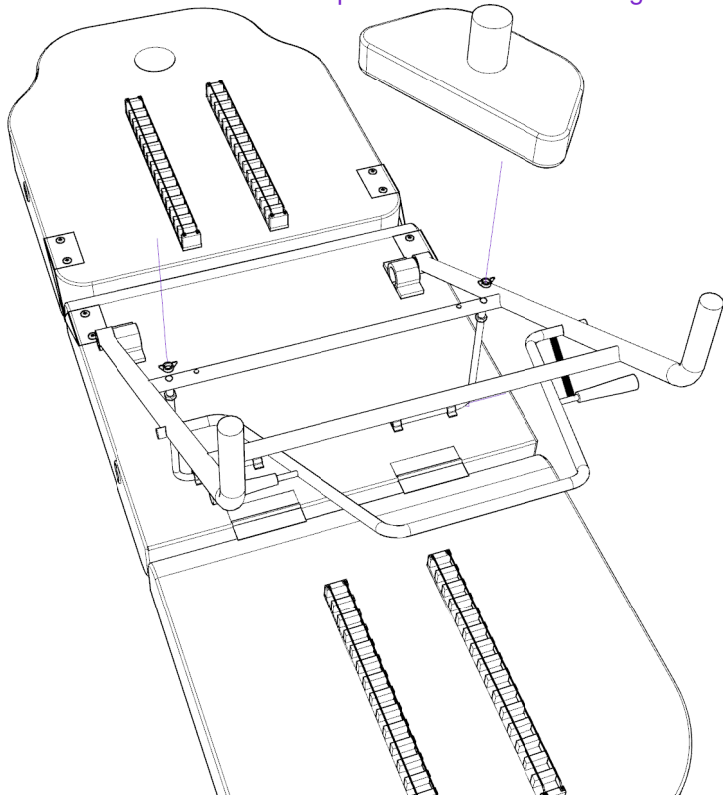


4

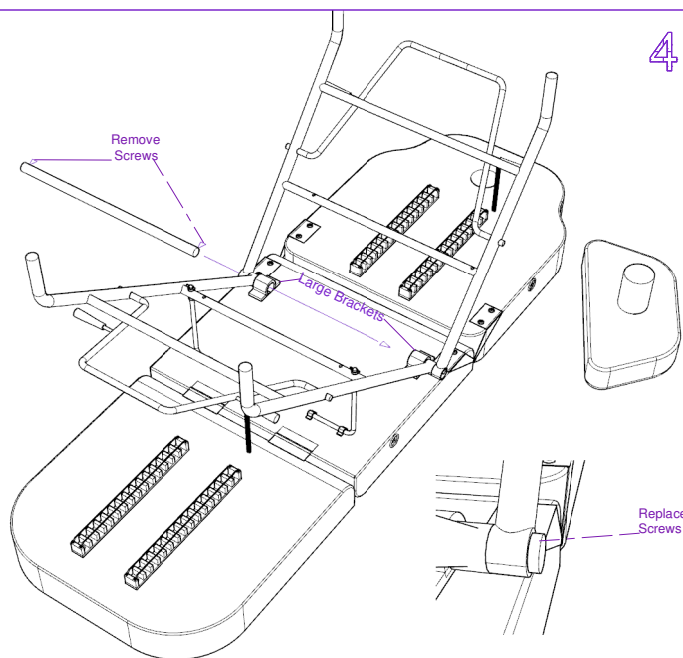


Now line both sets of legs with the large brackets on the middle cushion. Take the leg anchoring bar and remove the small screws from each end and slide it through the aligned holes of both sets of legs and the large brackets. Once it is all the way through, it should stick out a little on both sides. Replace the screws into the ends of the anchoring bar to keep it from coming out of place.

5


Now the long set of legs is in place. To secure the short set, remove the wingnuts from the 2 support bars. Hold the short set up in line with the long set and slide the support bars up through the holes. Just like the L-shaped rods, attach wing nuts to secure.

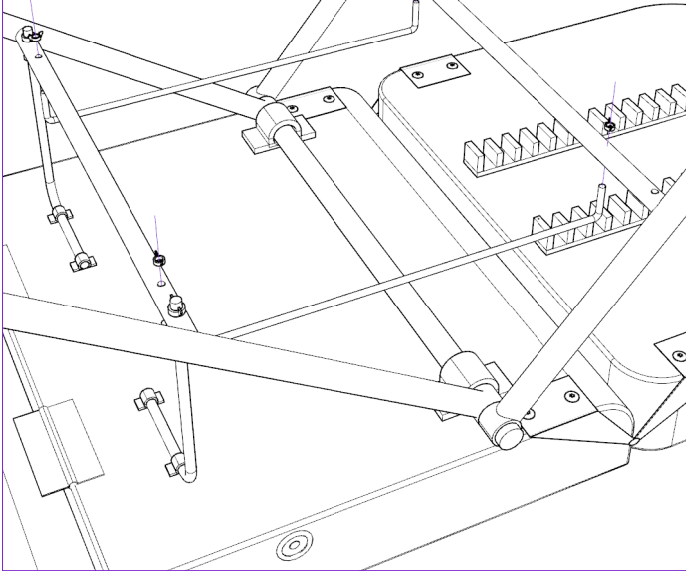


Now that both sets of legs are secured in their final positions, we can move to the final step of securing the adjustment bars. 6

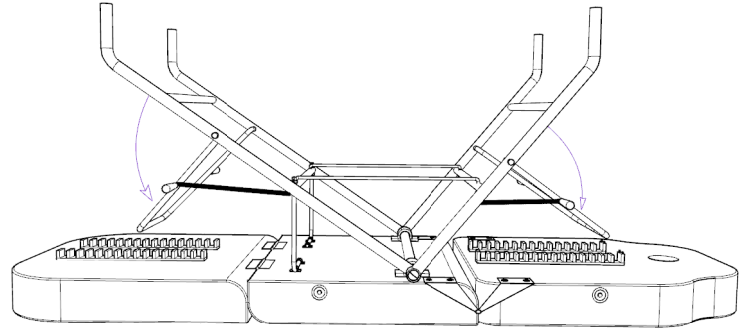

Remove the eight guide rails from the grooves. Move the adjustment bars into the grooves. Screw the guide rails back in.

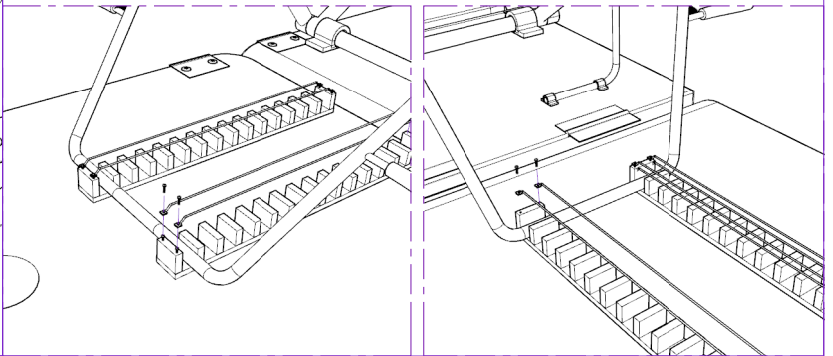

7

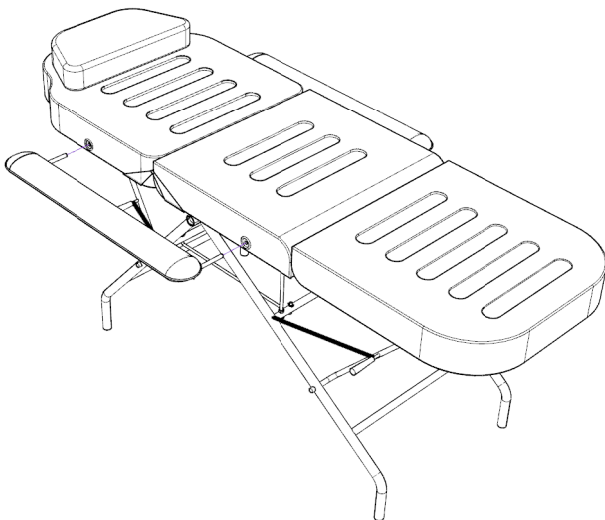

Insert the armrests into the holes with the zipper side facing down. The end with the zipper tab should face towards the foot of the bed.