


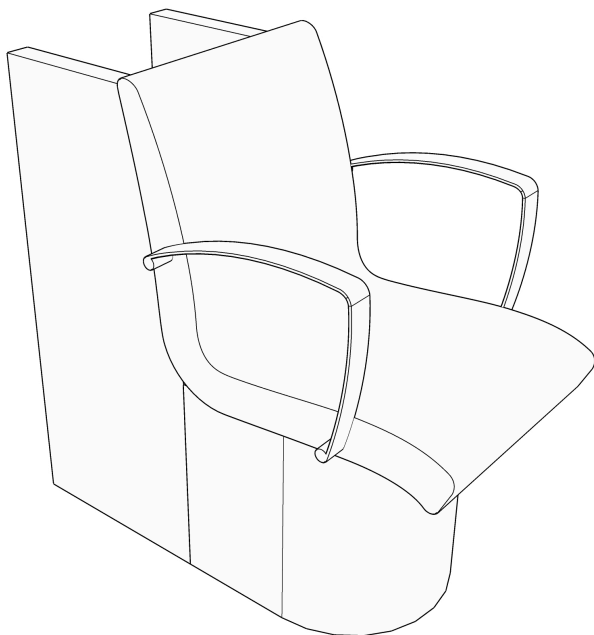

Assembly Instructions

Carrera Salon Dryer Chair


Model #9805




Parts List

Part	Qty.	Description	
A	4		Bolt - M8x35
B	2		Bolt - M8x50
C	2		Bolt - M8x(35+35)
D	8		Lock Washer + Flat Washer


Chair Top (1x)

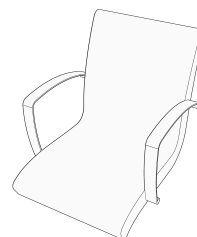


Dryer Seat (1x)

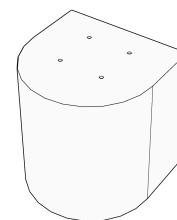

Dryer Back (1x)

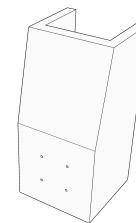


1 - Assembling the Dryer Base

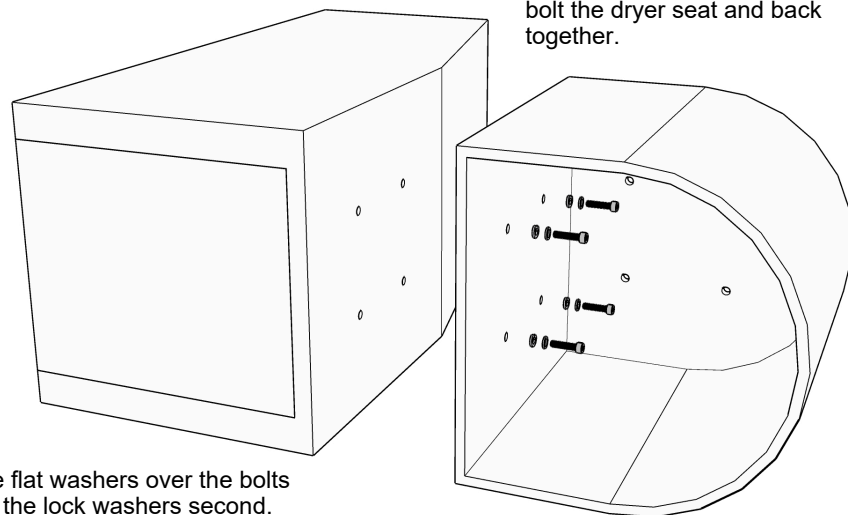

Using the 4 short bolts (A) and the 4 washer sets (D), bolt the dryer seat and back together.

Place the flat washers over the bolts first, and the lock washers second.

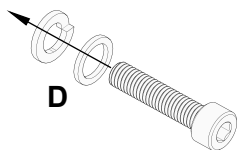

2 - Attaching the Chair Top

Use the remaining bolts and washers to mount the chair top to the dryer base. Use a lock washer and flat washer on each bolt.

The two medium-length bolts (B) screw into the rear of the chair top.

The two long bolts (C) screw into the front of the chair.

