




Assembly Instructions

Murano Styling Chair
Sku: AV-1061

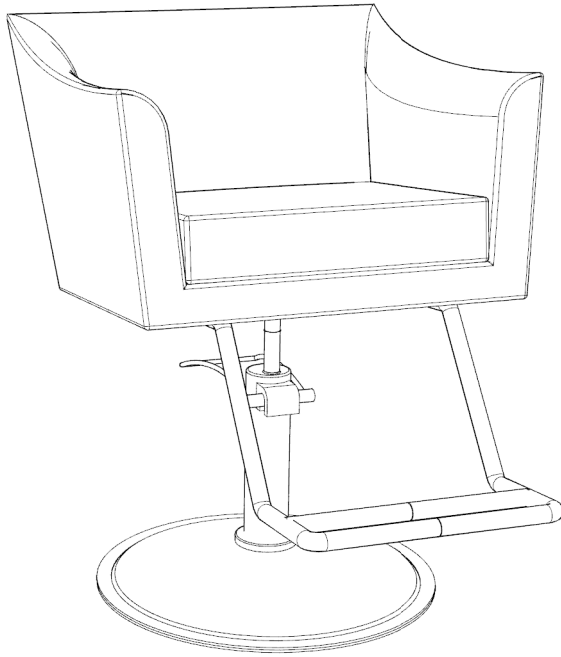


1) Locate the base with attached hydraulic foot pump (A) and remove the two bolts securing the small cushion.

2) Discard the cushion and bolts.

3) Place the chair (B) on top of the base and hydraulic (A) so that the chair fits into the indentation of the hydraulic. Secure the chair by pushing the chair down with force.

4) Make sure that the higher end of the bracket on top of the hydraulic is in the front.

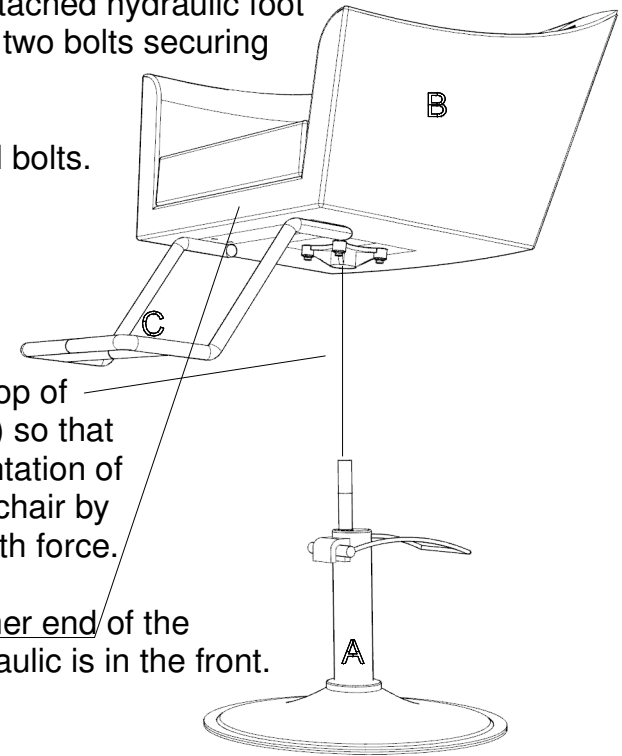


Parts List

Part	Qty.	Description
A	1	Base and hydraulic
B	1	Chair top
C	1	Footrest
D	2	Bolt + washer + lock washer

*Open all boxes to check for parts before beginning assembly.

**All bolt/washer sets are already in the brackets and footrest.

Tools Required: Allen wrench

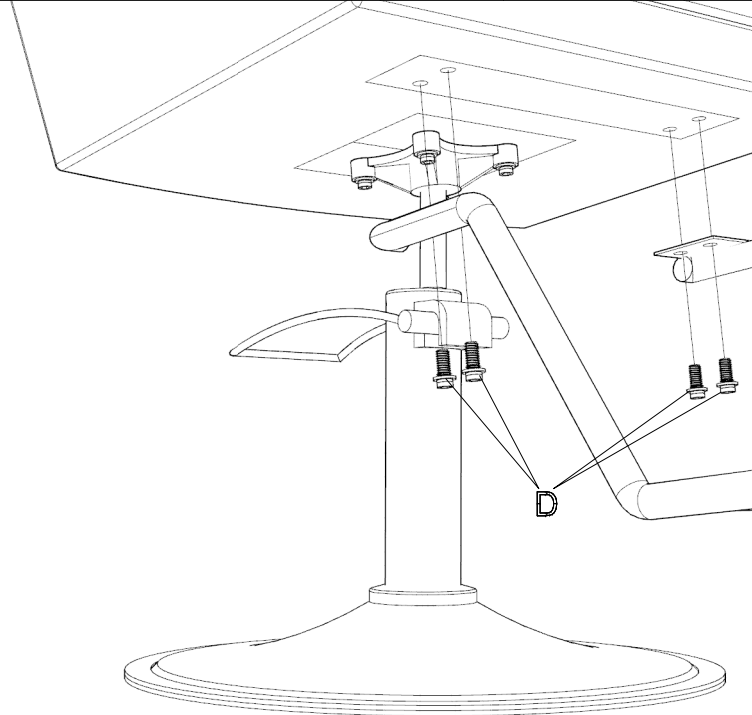

- Place the chair on a FLAT and LEVEL surface.

- Confirm that the chair hydraulic is at the lowest setting before customer use.

- Operator should always assist customer when entering and exiting the chair.