




Assembly Instructions

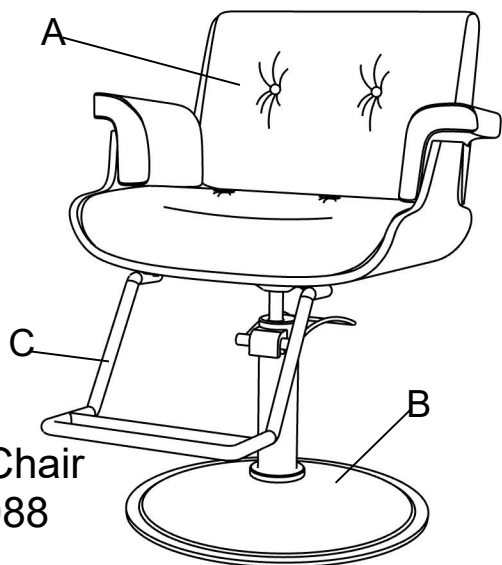

Kona Styling Chair
Model #AV-1088

PARTS LIST



Part	Qty.	Description
A	1	Chair top
B	1	Base and hydraulic
C	1	Footrest bar
D	4	Bolt + washer + lock washer

*Open all boxes to check for parts before beginning assembly.

**! ALWAYS KEEP HYDRAULIC BASE UPRIGHT.
THE HYDRAULIC SHOULD NOT BE STORED
OR TURNED UPSIDE-DOWN !**

①

Stand the hydraulic base upright on the floor and lower the chair top onto the post of the hydraulic.
Make sure the pin in the post lines up with the little groove in the bracket. When you have the chair in place on the hydraulic, push down hard on the chair to lock it into place.

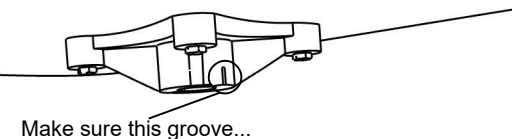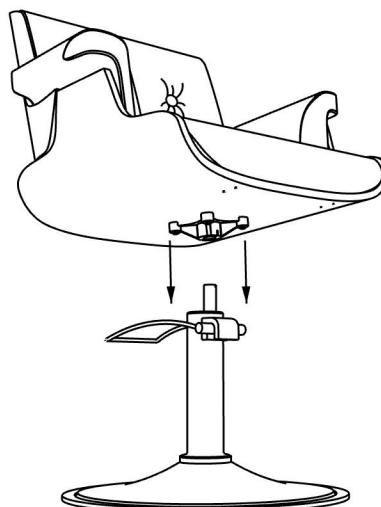


Make sure this groove...

...lines up with this pin.

②

Attach the footrest to the chair front using the four bolts and lock washers.

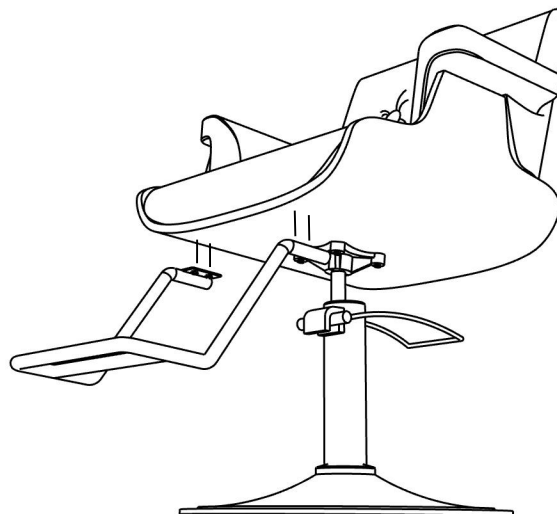

③

Enjoy your new chair.
Remember to always keep the hydraulic upright. Also be sure not to stand solely on the footrest.

It is good to pump the hydraulic to full height and back down several times right after assembly to prime the hydraulic fluid. This will keep the pump smooth and responsive.

Note that short quick pumping is more effective than pressing the lever all the way down each time.

If you have any questions or problems during assembly please call our customer service at 1.888.332.0123

Thanks for choosing Minerva!