


ANJERYA



Churchill Styling Chair

Model #AV-1091

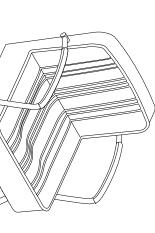

1) Locate the base with attached hydraulic foot pump (A) and remove the two bolts holding on the small cushion.


Place the chair (B) on top of the base and hydraulic (A) so that the chair fits into the indentation on the hydraulic and

secure the chair by pushing the chair down with force.


Make sure that the higher end of the bracket on top of the

hydraulic is in the front

Discard the cushion and bolts

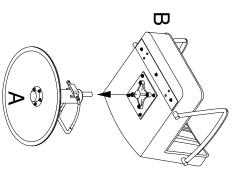

at the higher end Chair front is



## コトローローロー・

(N)

Bolt + washer + lock washer	4	D**
Footrest	_	C
Chair top	_	В
Base and hydraulic	_	Α
Description	Qty.	Part
PARIS LISI*		


- \*Open all boxes to check for parts before beginning assembly.
- \*\*All bolt/washer sets are already in the brackets and footrest.

Tools required:

Allen wrench (included)



Insert four bolts(D) into the holes as shown Position the footrest so that the four front bracket bracket of the footrest(C) holes on the chair are in line with the four holes in the

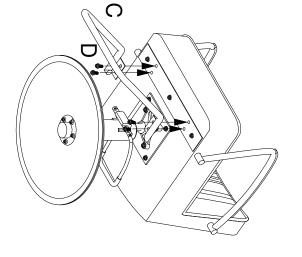

- $\overline{\omega}$ Chair is assembled

## !! Safety and Precautionary Information !!

- Place the chair on a FLAT and LEVEL surface
- Confirm that the chair hydraulic is at the lowest setting before customer use
- Operator should always assist customer when entering and exiting the chair
- DO NOT step or stand on the footrest. This can cause the chair to tip over.
- Footrest is optional.

Failure to follow these instructions could result in injury.