




Assembly Instructions

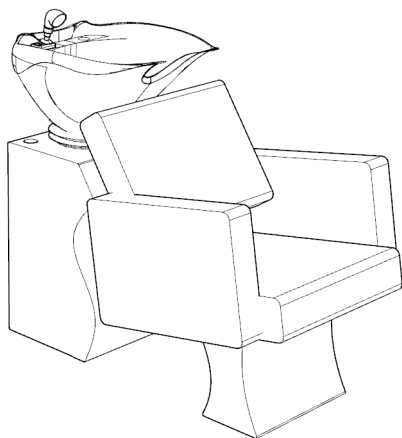

Avant Ultra Backwash System
Model #AV-5036


Parts List

Part	Qty.	Description
A	1	Chair Top
B	1	Shampoo Bowl
C	1	Main Base
D	1	Front Base
E	1	Chair Support Plate
F	2	Seat Bracket Plates
G	10	Short Screws w/ Lock Washers
H	8	Beveled Long Screws
I	1	Allen Wrench
J	1	14mm Wrench
K	2	Floor Anchors


- Remember to check all bags and boxes for parts before beginning the assembly process.

- A licensed plumber must perform all installation for plumbing and all plumbing related equipment. Failure to do so will result in the warranty being voided. Documentation must be provided to Minerva Beauty, Inc. for all plumbing related warranty issues. At no time should any product containing bleach or barbcide be used to clean or sanitize any of the shampoo sinks. Such products may cause the breakdown of seals and result in leaking.


Step 1
Attach Chair Support Plate
Use four short screws (G) to attach the Chair Support Plate (E) to the Main Base (C). Tighten with the allen wrench.

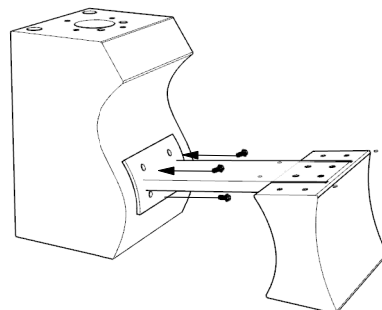

Step 2
Attach Front Base
Using four long screws (H), attach the Chair Support Plate (E) to the Front Base (D). Tighten with the allen wrench.


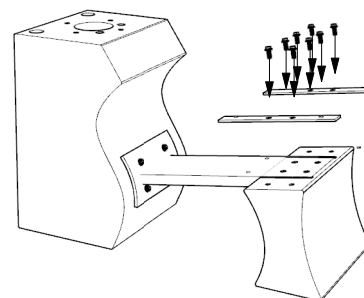


Step 3
Attach Seat Brackets (Can be done with step 2.)
Make sure the Seat Bracket Plates (F) are turned upright so that the long screw bevels fit into their designated spaces. using four long screws attach the Seat Bracket Plates (F) to the Front Base (D). Tighten with the allen wrench.

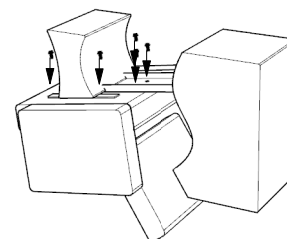

Step 4
Attach the Chair Top to the Main Base
Position the Chair Top (A) so that the six holes line up with the four holes in the Seat Bracket Plates (F) and with the two holes in the Chair Support Plate (E). Tighten with the allen wrench. It may be helpful to gently turn the entire unit upside down to finish tightening the screws.

Step 5
With the bowl upside down, remove the four nuts and washers attached to the tilting mechanism on the Shampoo Bowl (B). Invert the bowl and position it onto the Main Base (C) so that the bolts and springs line up with their designated cut-outs. Remove the back access panel of the main base. Replace the washers and nuts from inside the access panel and tighten with the 14mm wrench (J).

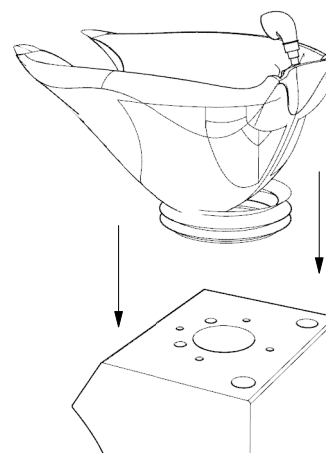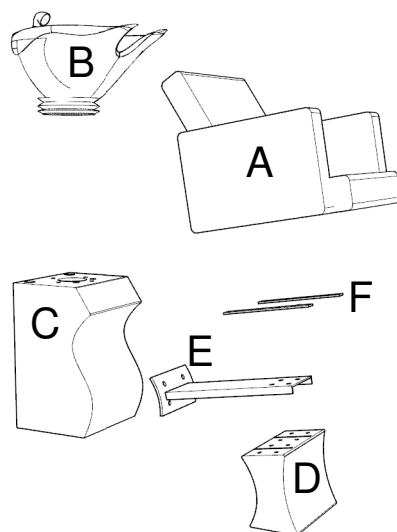

Congratulations!
Your Avant Ultra Backwash System is now ready for your licensed plumber to install the faucet valve.

