




Wheeled Client Chair Base Model #MB-5AP

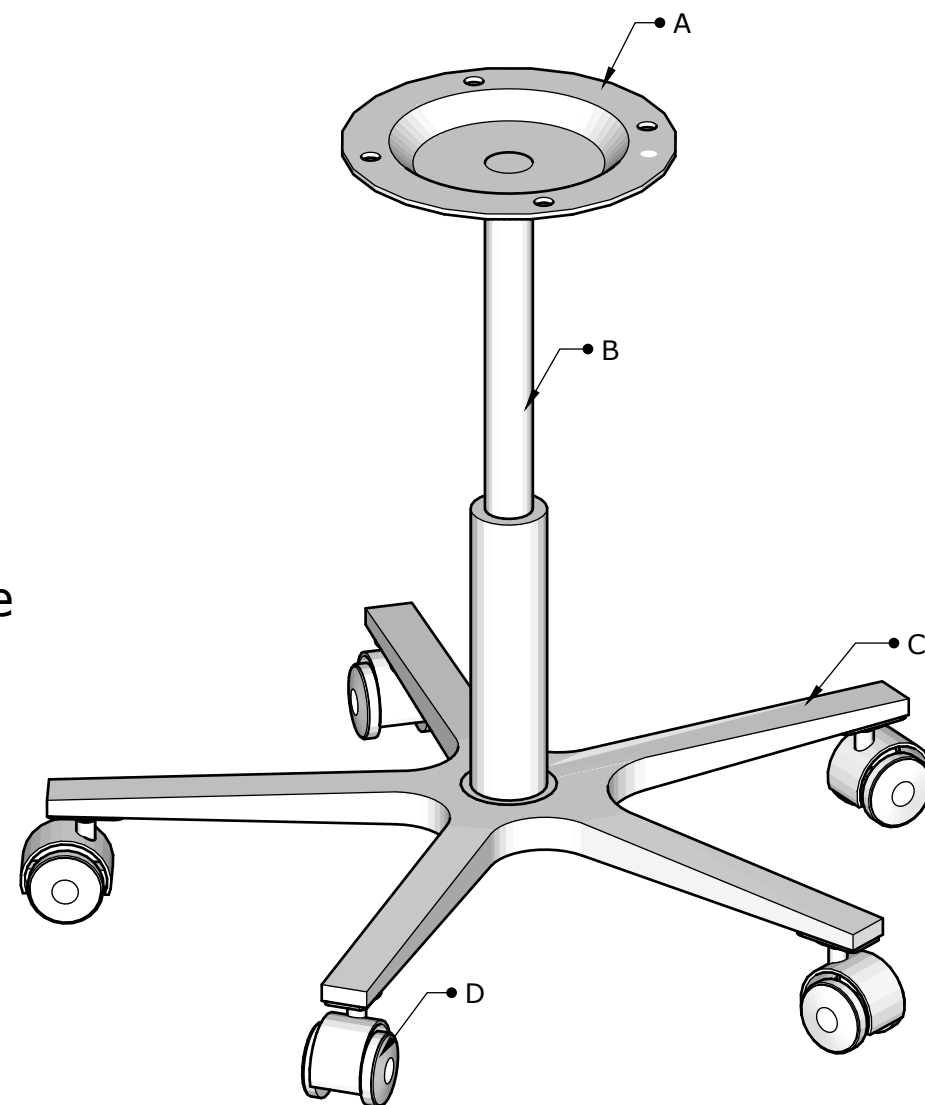

PARTS LIST


Part	QTY	Item Name
A	1x	Bracket
B	1x	Air pneumatic pump
C	1x	Base
D	5x	Wheel

Before beginning assembly, open all boxes to ensure all listed parts are present.

1

Attach Wheels

- 1) Flip stool base (C) upside down on a clean piece of cardboard or towel so that holes for wheels are exposed. Insert wheels (D) into the base by pressing them until you hear a “click” sound. Repeat for each wheel.

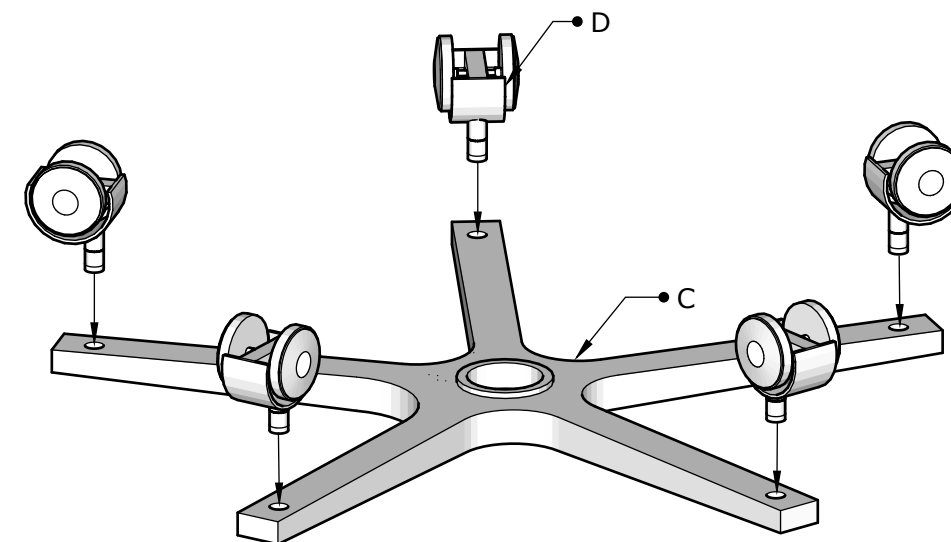

2

Attach Seat & Base

- 1) Insert air pneumatic pump (B) into the base (C) firmly.
- 2) Attach bracket (A) to the top of air pneumatic pump (B). Line up the seat bracket (A) with the top of the air pneumatic pump (B).
- 3) Press down firmly on entire stool to ensure everything is connected properly.
- 4) This base is now ready to attach to the bottom of chair top. Using the four bolts of the chair top, secure the base to the seat bracket (A).

