



Assembly Instructions

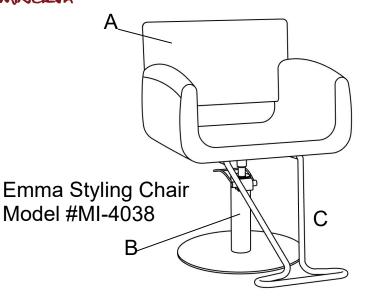

1) Secure the base, bracket (D), and footrest (C) to the chair top (A) with 4 bolt/washer sets (E) as shown
below. *Pump the hydraulic up higher if necessary to
see underneath

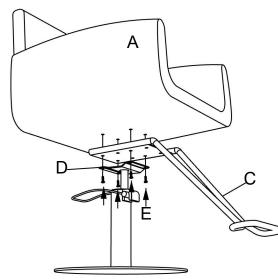

! ALWAYS KEEP HYDRAULIC BASE UPRIGHT. THE HYDRAULIC SHOULD NOT BE STORED OR TURNED


1) Attach the black mounting bracket (D) to the hydraulic

base with a bolt. Use open-ended wrench to firmly secure

UPSIDE-DOWN!

into place.

- 1) ! SEEK HELP TO DO THIS STEP! Two extra sets of hands are best to help keep everything in place. Once help is found, align the chair bracket (D) to the BACK set of holes on the footrest bar (C). Next, locate the holes found underneath the chair top (A) and hold in place.
 - 2) Ensure the higher part of the base bracket faces toward the front of the chair seat.

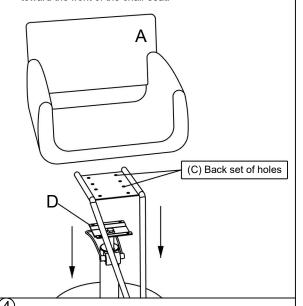

It is good to pump the hydraulic to full height and back down several times right after assembly to prime the hydraulic fluid. This will keep the pump smooth and responsive.

Enjoy your new chair.

Remember to always keep the hydraulic upright. Also be sure

not to stand solely on the footrest.

Note that short quick pumping is more effective than pressing the lever all the way down each time.

If you have any questions or problems during assembly please call our customer service at 1.888.332.0123

Thanks for choosing Minerva!

PARTS LIST

Part	Qty.	Description	
Α	1	Chair top	
В	1	Base and hydraulic	
С	1	Footrest bar	
D	1	Bracket	
Е	5	Bolt + washer + lock washer	

*Open all boxes to check for parts before beginning assembly.

Tools required (included):

Allen wrench

Open-end wrench



2) Assembly is now complete.