




Carnegie Retail
Display
Model # ML-12

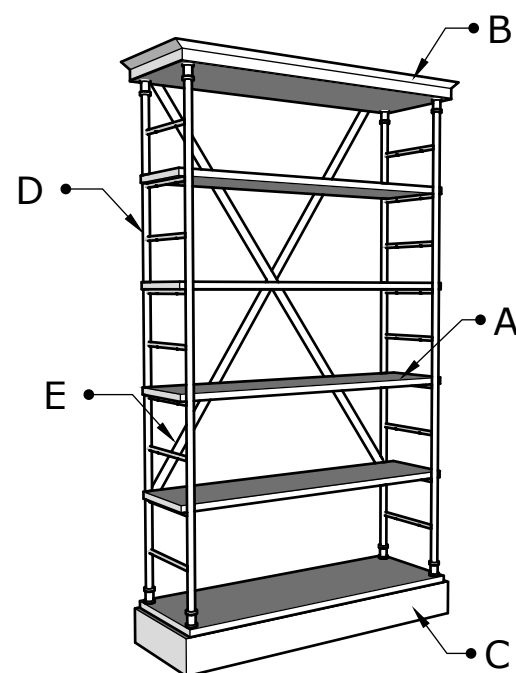

PARTS LIST*


Part	Qty.	Description
A	4	Shelving
B	1	Top
C	1	Base
D	1	Vertical support
E	2	Brace
F	8	M8
G	8	Washers
H	16	M6 x 35mm
I	9	M6 x 20mm

Open all boxes to
check for parts before
beginning assembly.


Tools Required (included)

Allen Wrench


Open-end Wrench

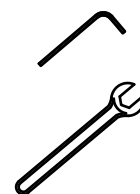


Vertical support

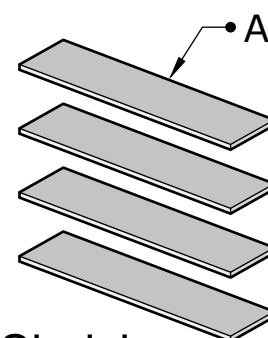


Shelving

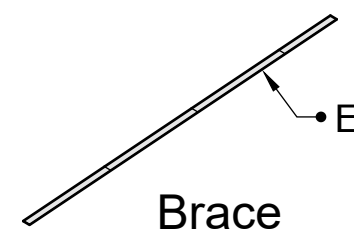

Brace

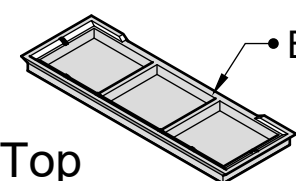



Top

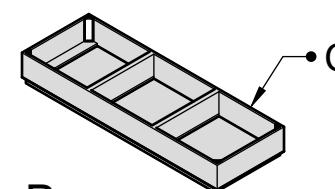

Base



2

2. Screw each
shelving on the
desired height using
(H) bolts.

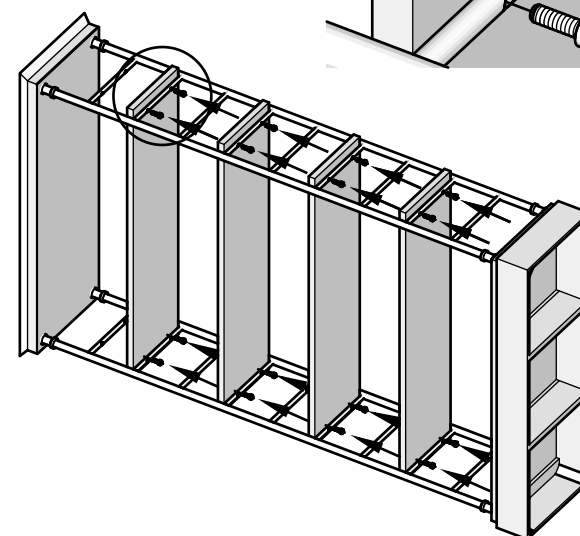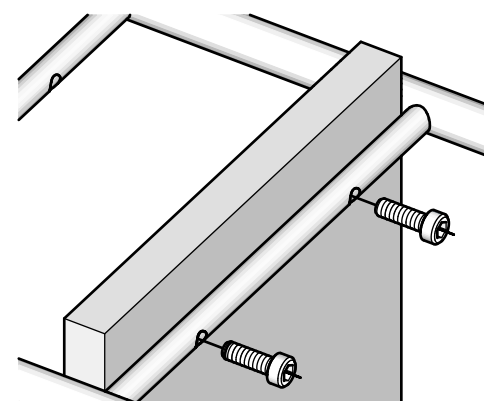

1

1. Place the vertical support's thread through the
hole on both top and bottom parts. Use a nut and
washer to secure them in place.

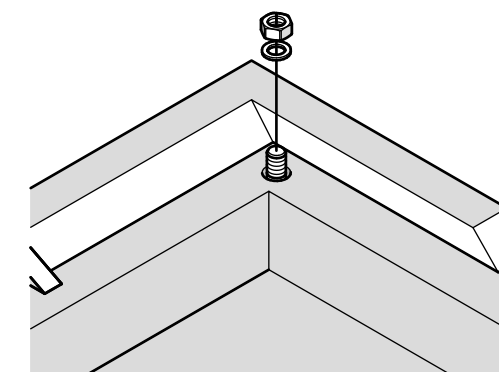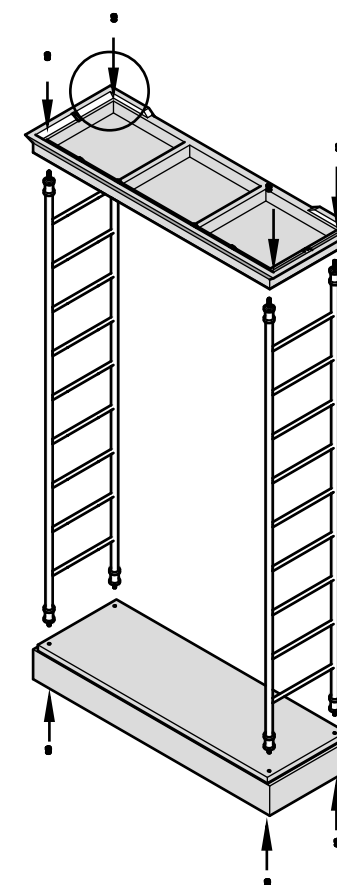

3

3. Attach one (E) brace to the top left corner and
across diagonally. Secure both points using (I)
bolts. Repeat this step on the opposite side and
secure both points using (I) bolts. Finally, use (I)
bolts to secure the braces .

