


# Assembly Instructions

Zaria Styling Chair  
Model #MT-3806

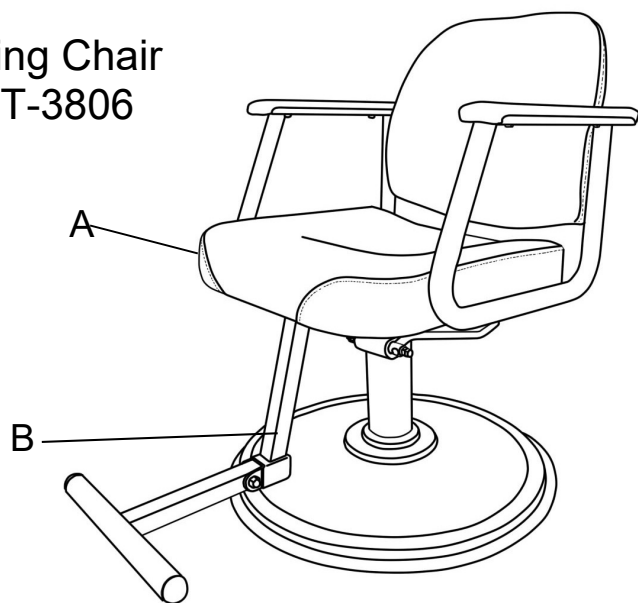



①

! ALWAYS KEEP HYDRAULIC BASE UPRIGHT.  
THE HYDRAULIC SHOULD NOT BE STORED  
OR TURNED UPSIDE-DOWN !

- 1) Locate the chair top (A).
- 2) Remove the 4 bolt/washer sets (C) from the bottom of the chair top.

②

- 1) Align the screw holes on the underside of the chair top to the holes in the bracket on top of the hydraulic base.
- 2) Be sure to align the front of the chair with the side of the base that has the footrest.
- 3) Secure the base to the chair top with 4 bolt/washer sets (C).
- 4) Assembly is now complete.

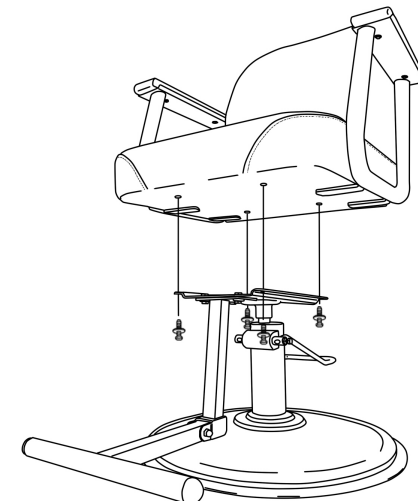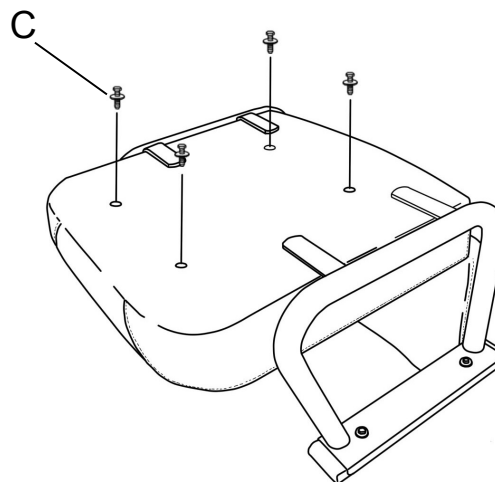

## PARTS LIST\*

Part	Qty.	Description
A	1	Chair top
B	1	Base, hydraulic, and footrest
C*	4	Bolt + washer

\*Bolt/washer sets can be found in  
the base of chair top.

Open all boxes to  
check for parts  
before beginning assembly.

Tools required:

Wrench (included)



③

Enjoy your new chair.

Remember to always keep the  
hydraulic upright. Also be sure  
not to stand solely on the footrest.

It is good to pump the hydraulic  
to full height and back down several  
times right after assembly to prime  
the hydraulic fluid. This will keep the  
pump smooth and responsive.

Note that short quick pumping is more  
effective than pressing the lever all the  
way down each time.

If you have any questions or problems  
during assembly please call our  
customer service at 1.888.332.0123

Thanks for choosing Minerva!