


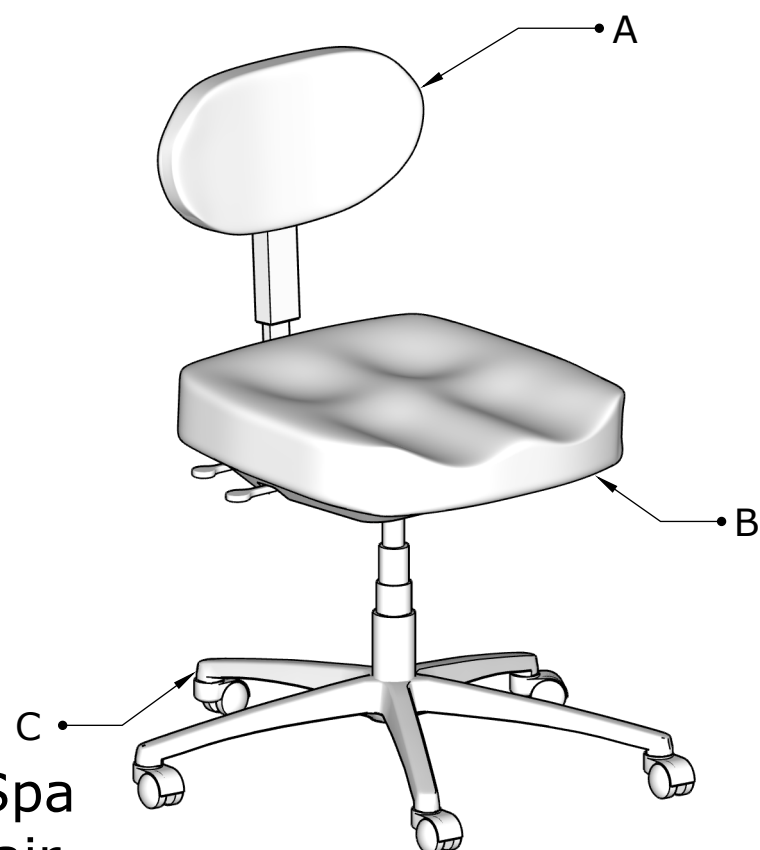

Soma Medical Spa
Technician Chair
Model # MX-C01




PARTS LIST

Part	Qty.	Description
A	1	Backrest assembly
B	1	Seatrest assembly
C	1	Base
D	1	Gas lift cylinder
E	1	Cylinder cover
F	4	Screw+Washer

*Open all boxes to
check for parts before
beginning assembly.

Tools required (included):

Hex wrench (included)




! ALWAYS KEEP HYDRAULIC BASE UPRIGHT. THE HYDRAULIC
SHOULDN'T BE STORED OR TURNED UPSIDE-DOWN!
! SEEK HELP TO DO THIS STEP!

Assembly instructions:


1

1. Insert the backrest assembly into the seatrest assembly, and fix it with 2 screws and washers.

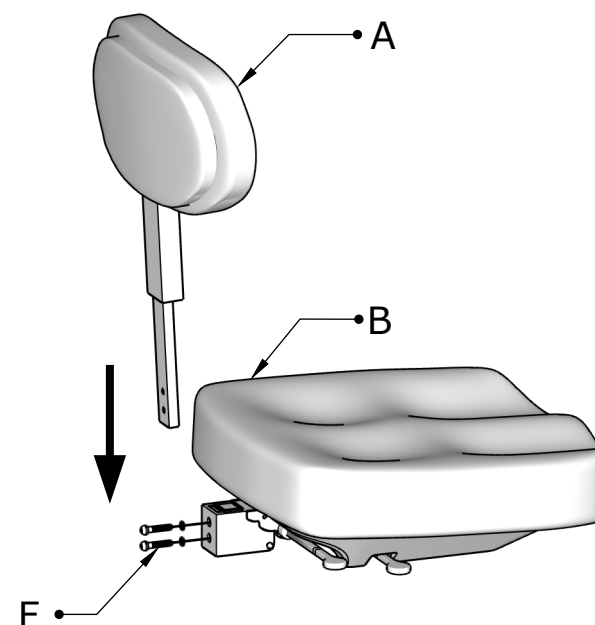


2

1. Insert gas lift cylinder into base.

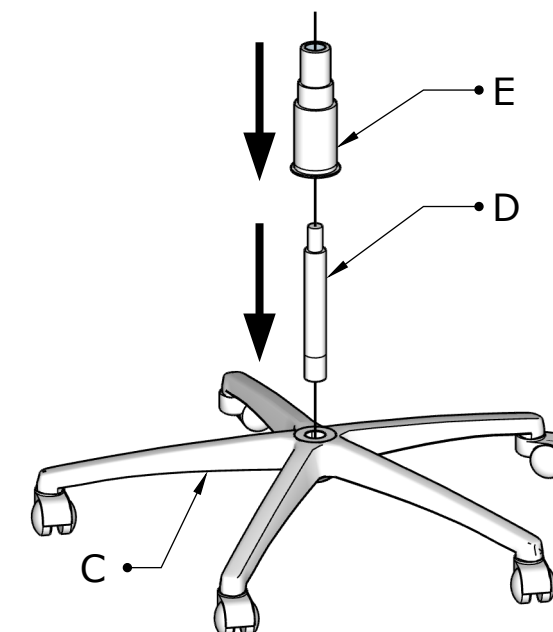

3

1. Place the seatrest assembly on top of gas lift cylinder.
2. Sit on stool to permanently lock cylinder into base and seatrest assembly.

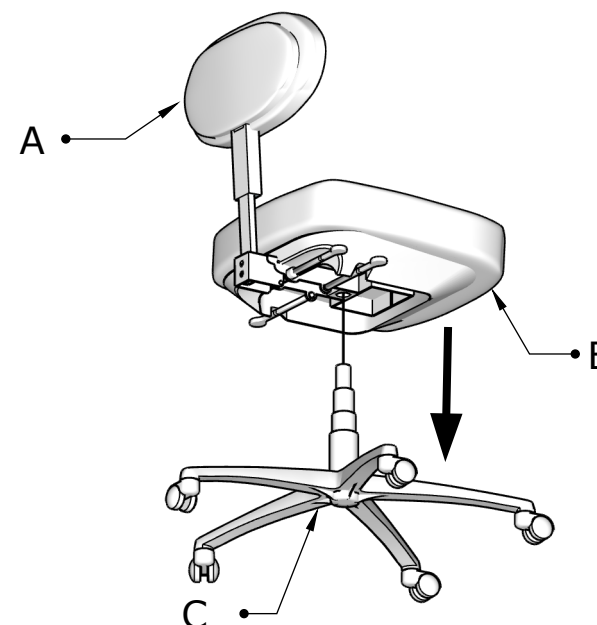

4

Enjoy your new chair

Remember to always keep the hydraulic upright. Also be sure not to stand solely on the footrest.

It is good to pump the hydraulic to full height and back down several times right after assembly to prime the hydraulic fluid. This will keep the pump smooth and responsive.

Note that short quick pumping is more effective than pressing the lever all the way down each time.

If you have any questions or problems during assembly please call our customer service at 1.888.332.0123

Thanks for choosing Minerva!