


MODERA CABINETS

Generic Assembly Instructions

**This is a generic instruction manual.*


Your assembly will vary based on the model you purchased.

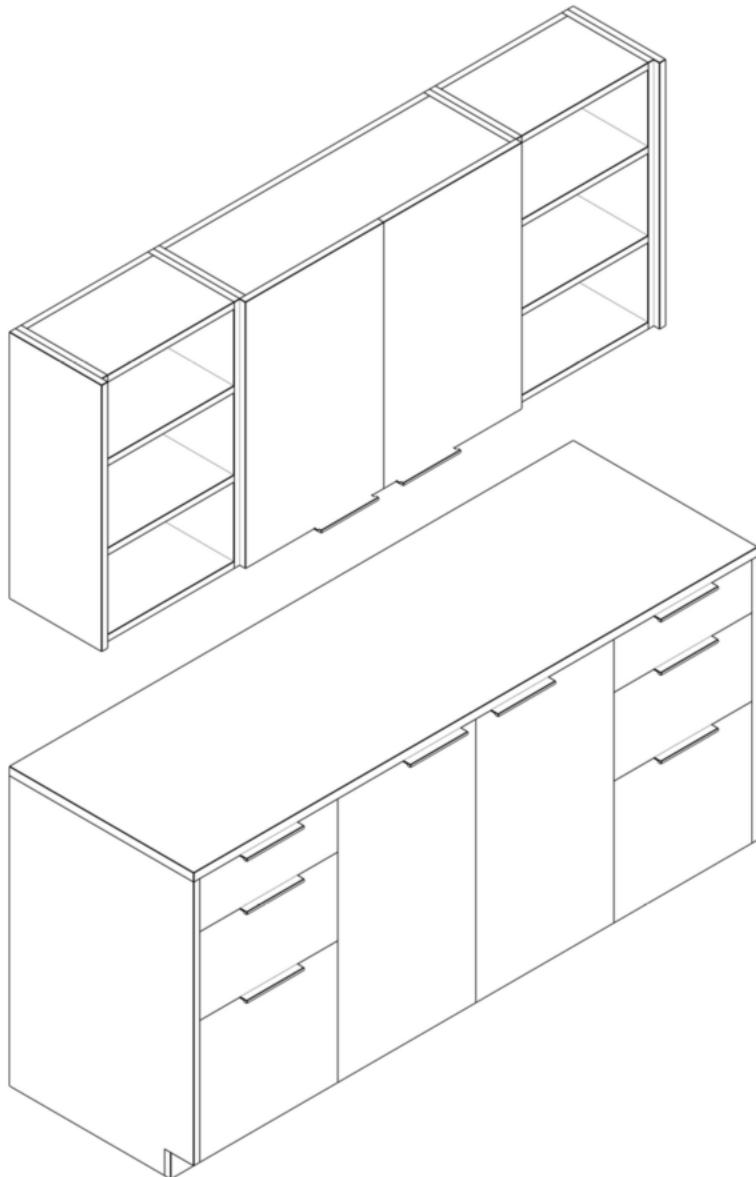

Tools & Materials You'll Need:



Phillips screwdriver (or drill with driver bit)

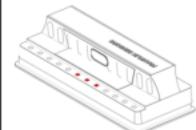

Stud finder (for locating wall studs)




Glue (Provided)



Hammer (Not Provided)



Hardware Pack (bolts, screws, handles) (Provided)

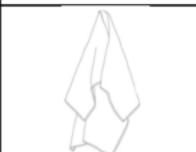


Soft cloth or cardboard (to protect countertop)



Fasteners to attach to the wall are NOT provided
— use ones appropriate for your wall type.

STEP 1 — UNBOX & ORGANIZE


1. Carefully remove all cabinets and parts from packaging.
2. Arrange base cabinets in the order they'll be installed.
3. Use your packing list to verify all components are included.

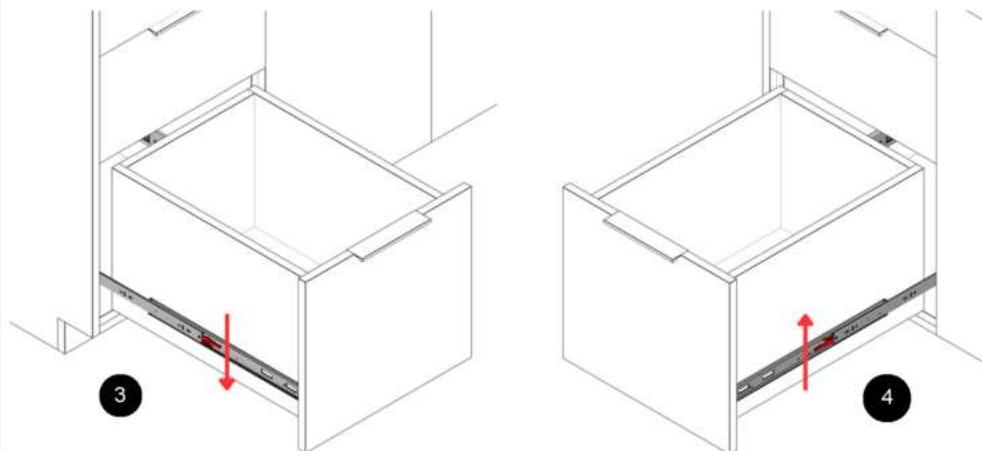

STEP 2 — REMOVE DRAWER BOXES



1. Pull a drawer open.
2. On each drawer slide, locate the black release tabs:
3. Push the left tab down
4. Lift the right tab up
5. While holding the tabs, pull the drawer straight out.
6. Repeat for all drawers.


***Important: Keep drawers in order—they are grain-matched.

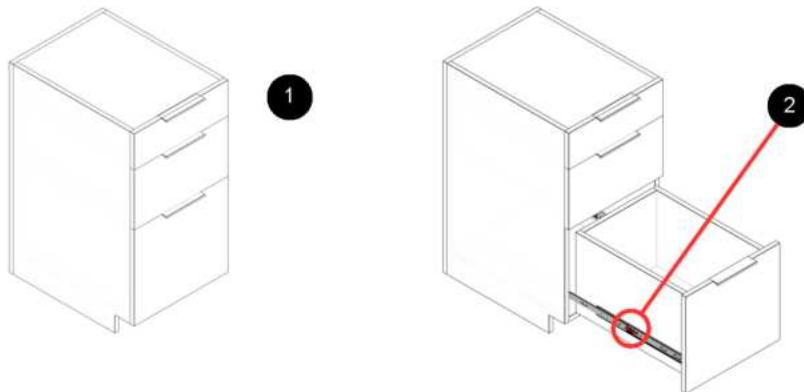

STEP 3 — REMOVE LOWER CABINET DOORS

1. Open a lower cabinet door.
2. Find the small button on the back side of each hinge.
3. Press the button to release the hinge from the cabinet frame.
4. Gently remove the door and set it aside.
5. Repeat for all lower doors.

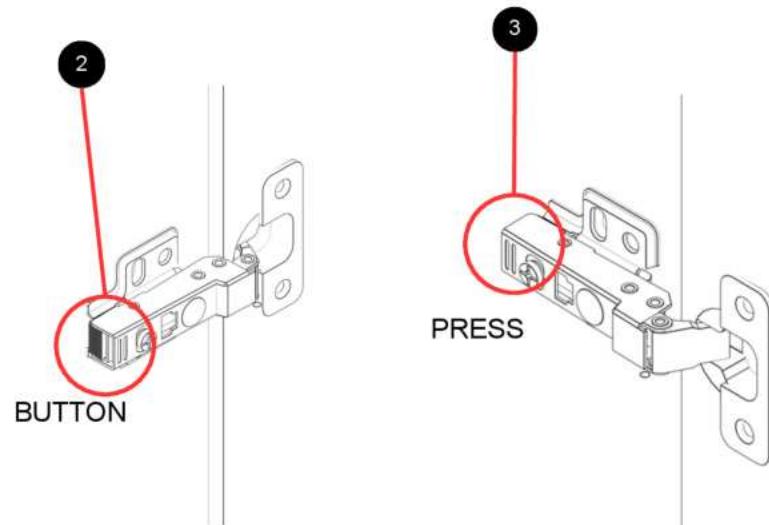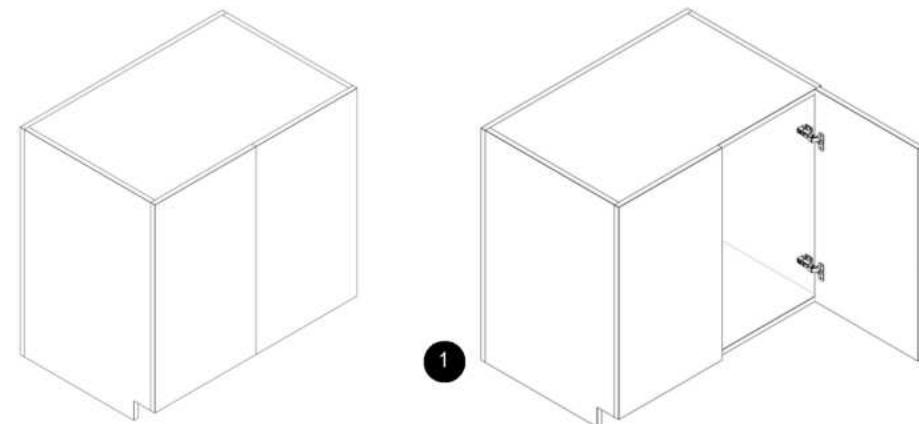

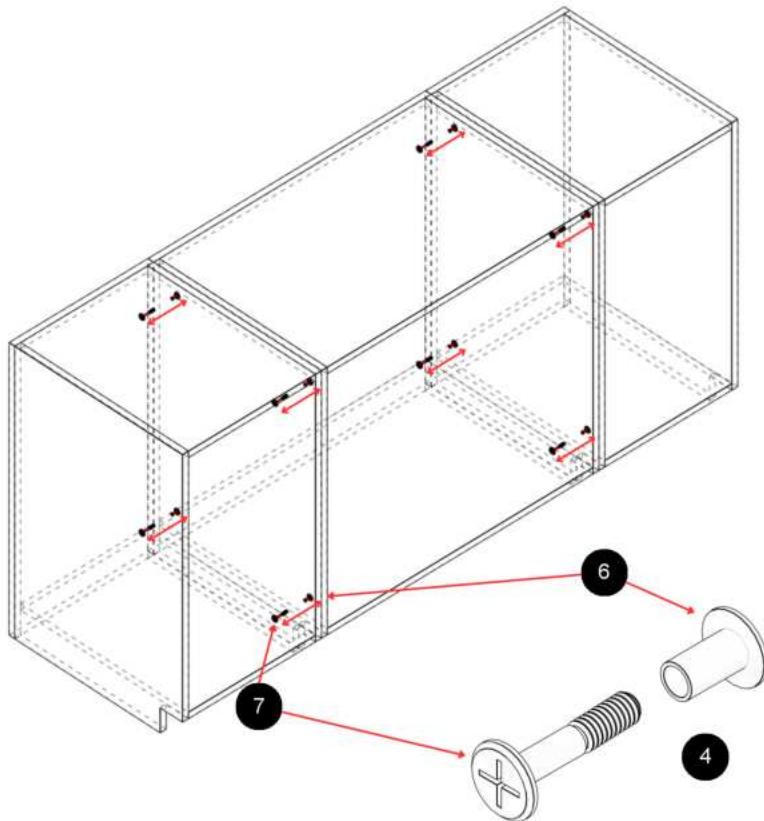



STEP 4 — ALIGN & CONNECT BASE CABINETS

1. Slide base cabinets together so they're tight and aligned.
2. Top edges should be level
3. Front faces should be flush
4. Open the hardware pack and locate the long silver thru bolts.
5. Inside each cabinet, find the predrilled holes near the corners.
6. Using a hammer, install the female barrel into the predrilled holes.
7. Insert the male screw into the female barrel.
8. Tighten to pull cabinets snugly together.
9. Use four bolts total—one in each corner.

STEP 5 — ATTACH END PANELS

1. Position the end panel so it's:
 - a. Flush with the top of the cabinet
 - b. Flush with the back
 - c. Slight front overhang is normal
2. Use the same long bolts to attach it securely.
3. Repeat for the other end panel.

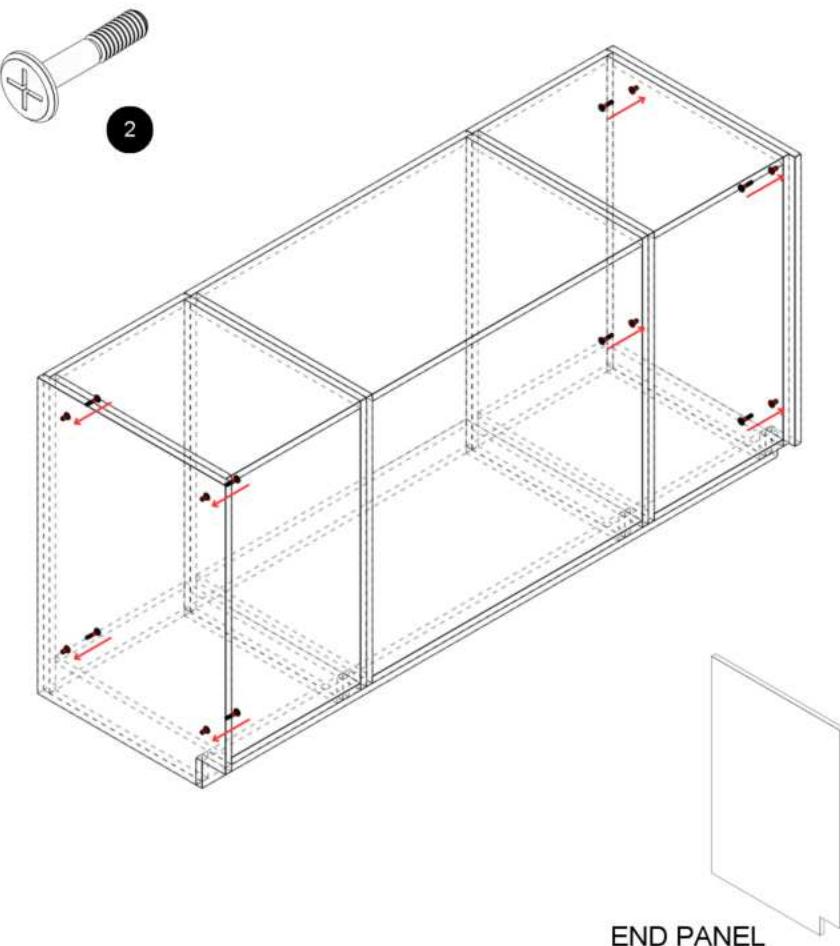

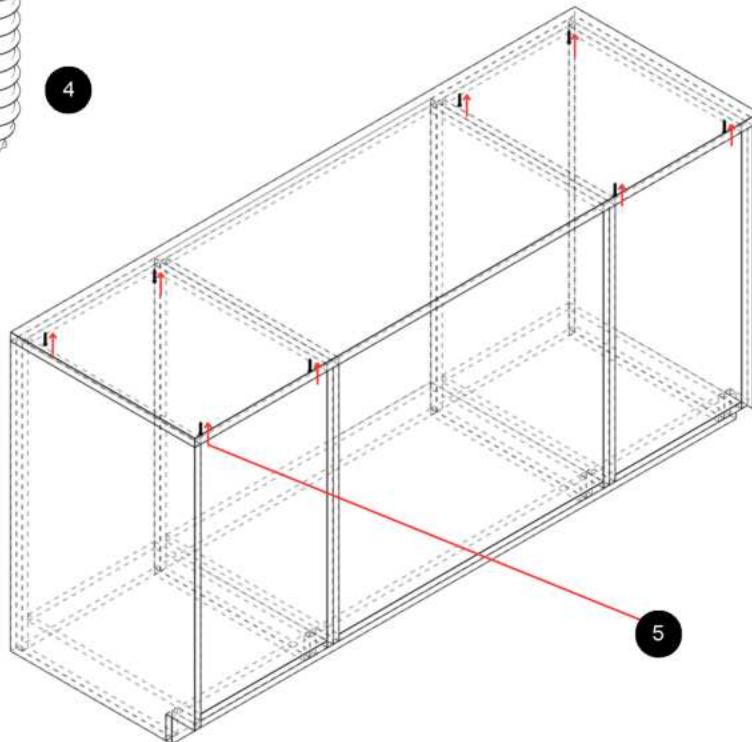

STEP 6 — INSTALL THE COUNTERTOP

1. Place the countertop on the base cabinets.
2. Center it evenly, side to side.
3. From underneath, locate the predrilled holes in cabinet tops.
4. Use the 1¼" black screws from your hardware pack.
5. Screw upward into the underside of the countertop.
6. Press on on counter when attached***

STEP 7 — INSTALL THE BACKSPLASH

1. Lay backsplash face-down on a protected surface.

2. Apply glue to the back.


3. Flip it upright and press it firmly against the wall.

4. Hold for 10–15 seconds until it tacks.

1

2 GLUE


Do circles on the back

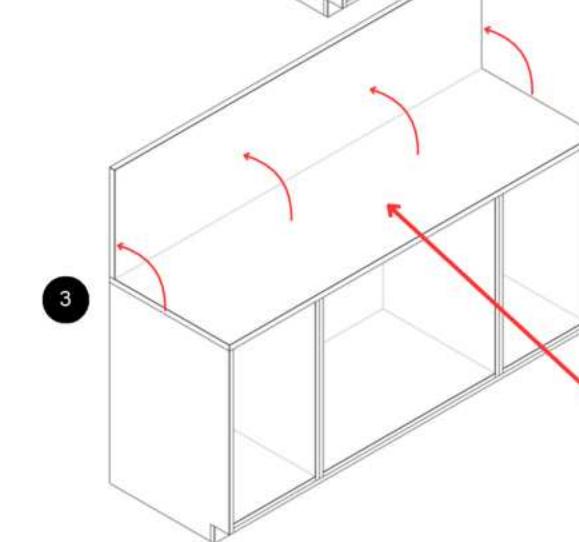

STEP 8 — PROTECT COUNTERTOP

Place a soft cloth or cardboard on the countertop to protect it while installing upper cabinets.



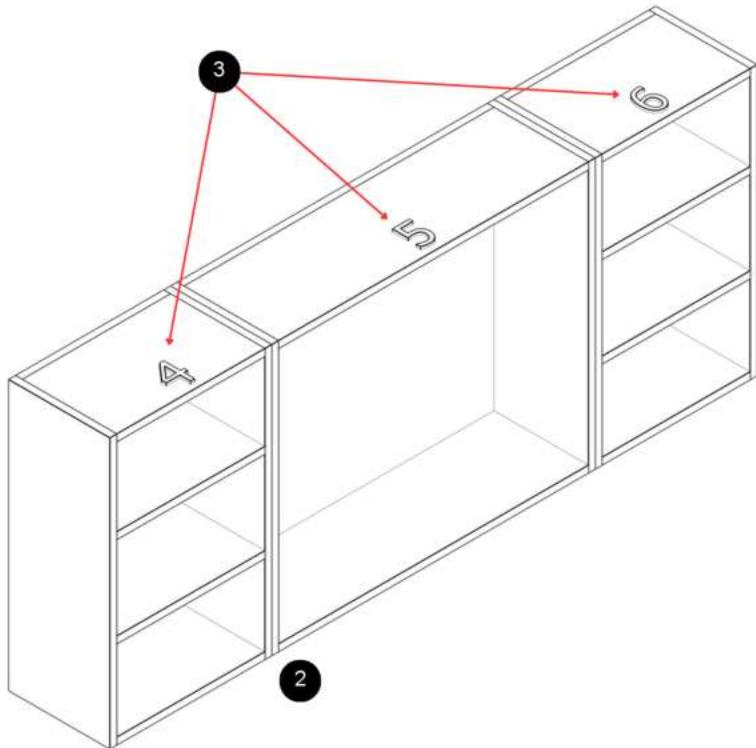




STEP 9 — INSTALL UPPER CABINETS

1. Prepare
2. Lay out upper cabinets in install order.
3. Check the numbers marked on them.

STEP 10 — ATTACH END PANELS

1. Position the end panel so it's:
 - a. Flush with the top of the cabinet
 - b. Flush with the back
 - c. Slight front overhang is normal
2. Use the same long bolts to attach it securely.
3. Repeat for the other end panel.

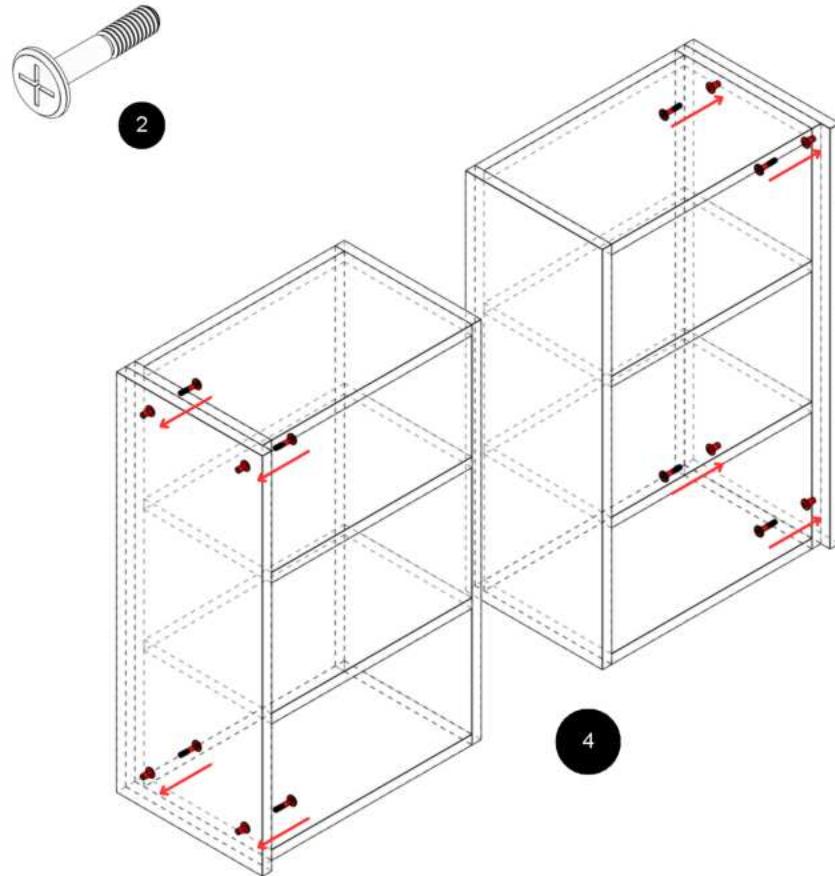

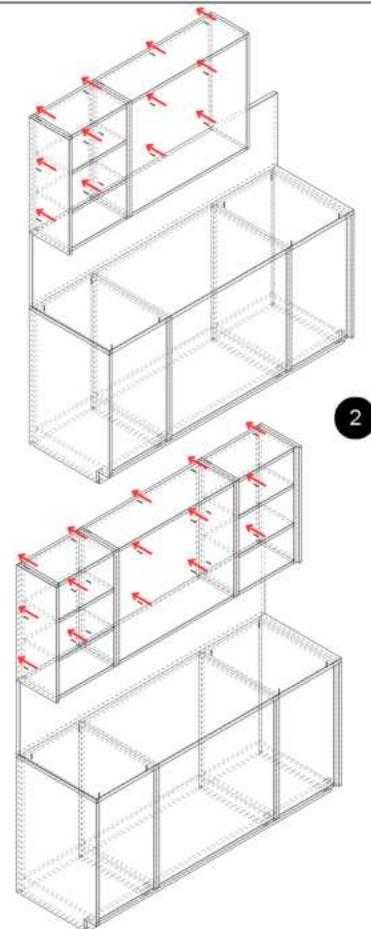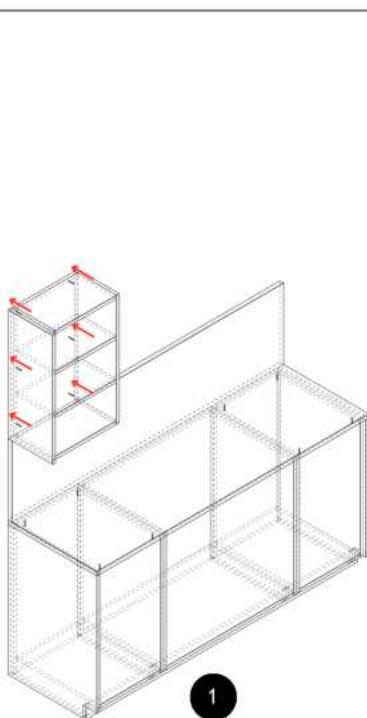

FASTENERS/SCREWS FOR WALL NOT PROVIDED

STEP 11 — INSTALL UPPER CABINETS

1. Install First Cabinet:

- *Set the first cabinet on top of the backsplash, flush with the edge.
- **Use a stud finder to locate wall studs.
- ***Use appropriate fasteners & Screws (not provided) to secure to wall.
- ****Secure each cabinet to wall studs as you go.

2. Install Remaining Cabinets:


- a. Set the next cabinet beside the first—tight against it.




3. Check that:

- a. Front faces are flush
- b. Tops are level

STEP 12 — INSTALL UPPER CABINETS

1. Slide base cabinets together so they're tight and aligned.
2. Top edges should be level
3. Front faces should be flush
4. Open the hardware pack and locate the long silver thru bolts.
5. Inside each cabinet, find the predrilled holes near the corners.
6. Using a hammer, install the female barrel into the predrilled holes.
7. Insert the male screw into the female barrel.
8. Tighten to pull cabinets snugly together.
9. Use four bolts total—one in each corner.

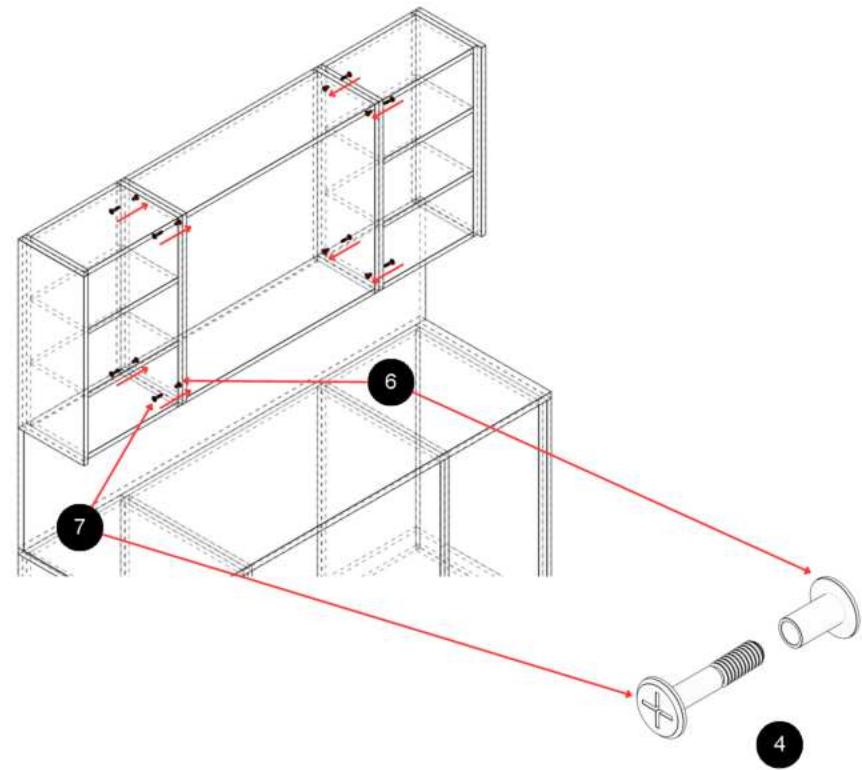


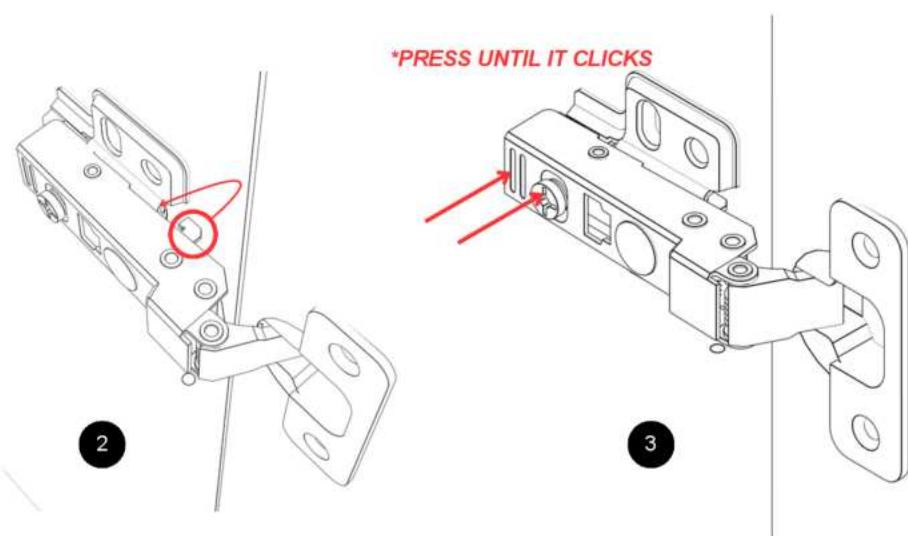
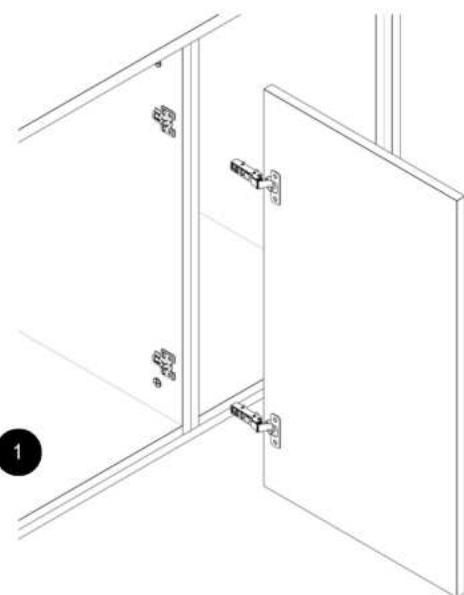
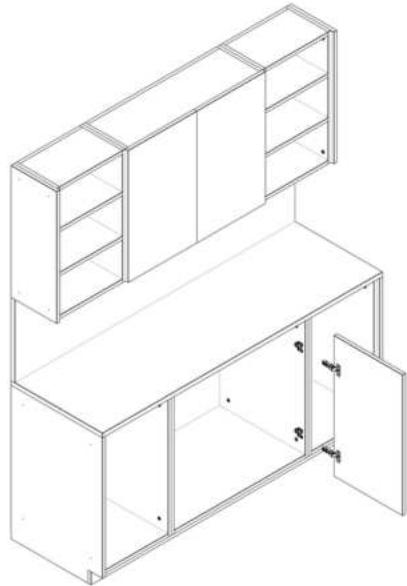



STEP 13 — REINSTALL DOORS

1. Hold a door near its original position.
2. Hook the hinge into its slot.
3. Press until it clicks into place.
4. Repeat for all cabinet doors (upper and lower).

STEP 14 — REINSTALL DRAWER BOXES

1. Align the drawer box with the metal slides in the cabinet.
2. Push the drawer straight in—it may feel tight at first.
3. Push again until it glides smoothly.
4. Repeat for all drawers.

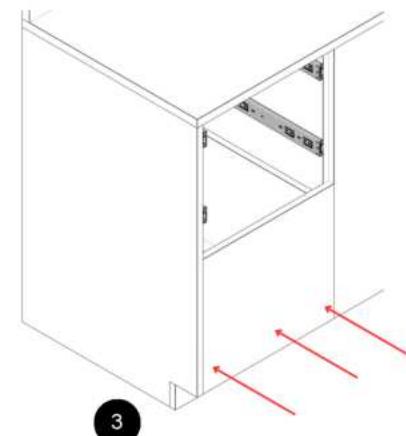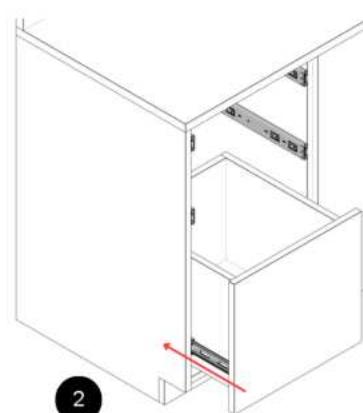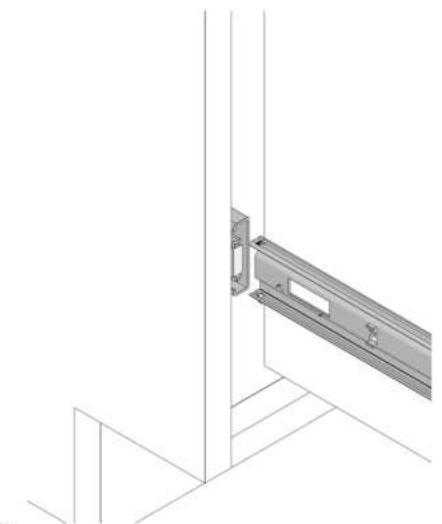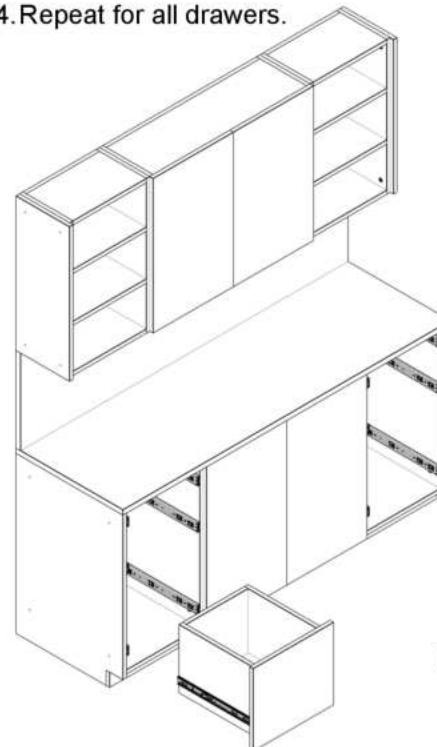

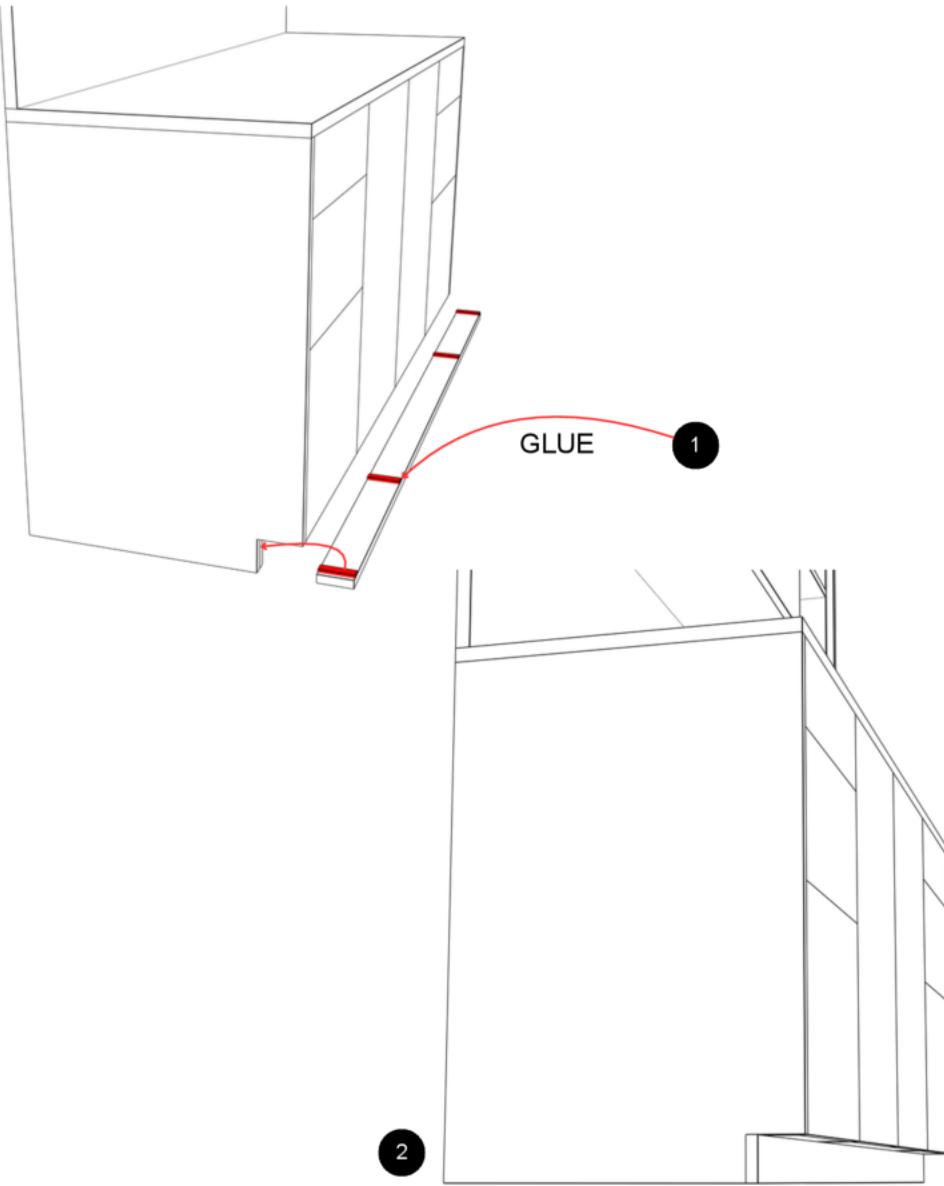

STEP 15 — INSTALL TOE KICK

1. Apply glue to the back of the toe kick panel in several spots.
2. Press it firmly against the base of the cabinets.
3. Align it flush with both ends.
4. Hold in place until glue sets.

STEP 16 — INSTALL HANDLES

1. Find the pre-drilled holes on doors and drawers.
2. Line up the handle and insert screws from the back.
3. Tighten securely.
4. Repeat for all handles.

