



Hot Cabinet 207a

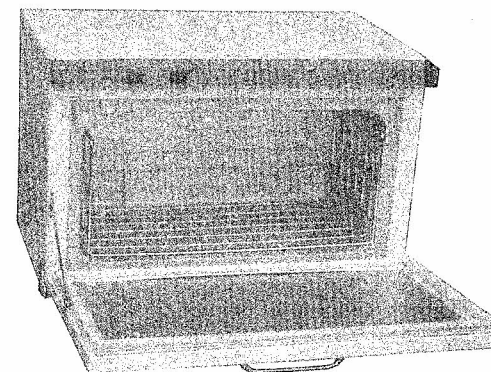

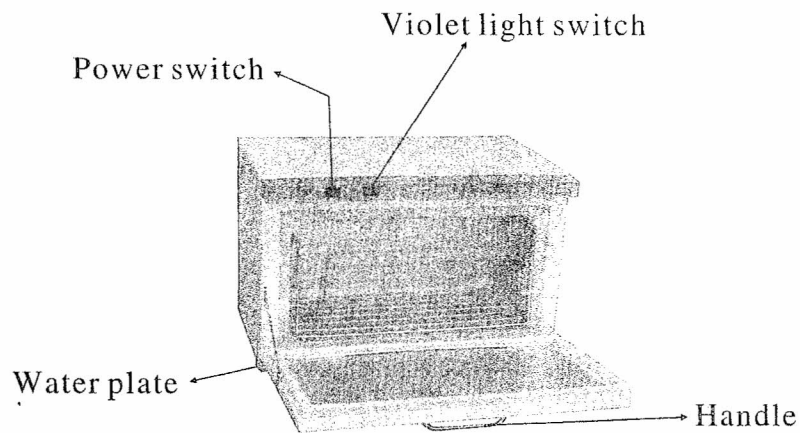

OPERATING PANEL

● **Function:**

Ionization generated by ultraviolet light emitted by sterilization luminous tube and oxygen in the air makes ozone, which can effectively eliminate bacillus coli, staphylococcus aureus, bacillus subtilis, spore black variation and virus damaging hepatitis B generate, can be used for sterilization of towel and other facial beautification tools which are not high temperature resistant.

● **Hot Cabinet:**

Function; sterilization by high temperature or violet ray.

● **Operating:**

- A. Pull handle to outside.
- B. Put towel into the cabinet.
- C. Close the cover and turn power on.
- D. To use the violet ray, turn violet light switch on.

● **Notice:**

- (1) The temperature inside the cabinet is high.
- (2) Clean the water plate as heed.

● **Main technical parameters:**

Power source: 220V/50Hz

Rated input power: 240W

Time of sterilization: ≥ 15 minutes

Volume: 16L

Category of electric shock prevention: Category 1

SIZE	G.W	N.W
50.1 x 31.2 x 34.6 (MM)	9 kgs	8.1 kgs