





1

Insert the pole (A) in the appropriate slot of the base (B) and lock it with the screw (C) and washer (D) supplied, using the key (E) indicated.

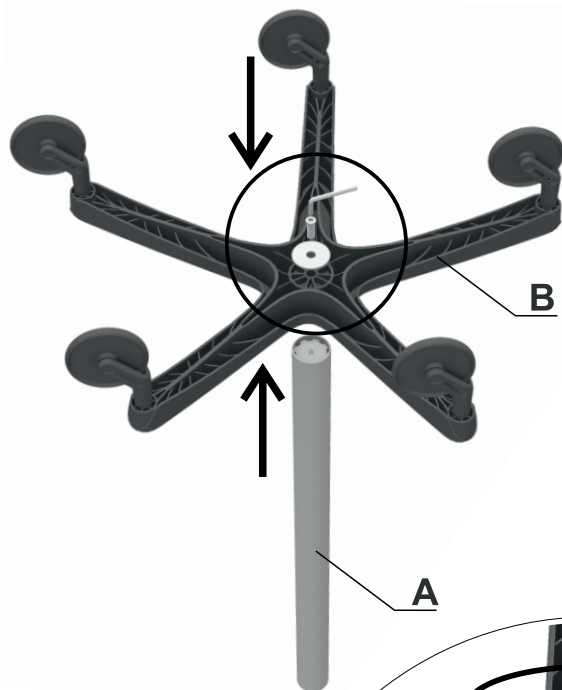


- A) Pole
- B) Base
- C) Screw M8
- D) Washer M8
- E) Hexagonal wrench n.5


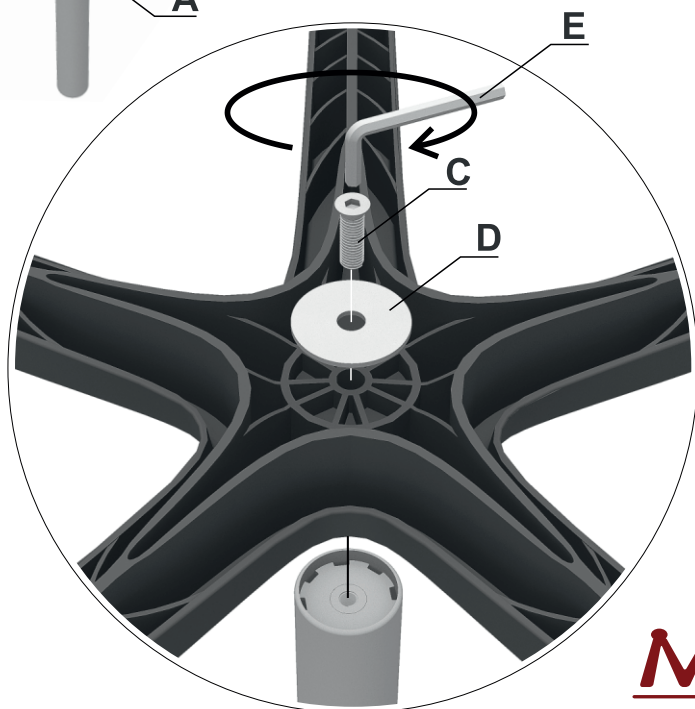


2

Insert the pole (A) in the special slots on the back of the body (F) and lock it with the screw (C) supplied, taking care to tighten the screw with moderation. Pay attention to the positioning of the base (see page's bottom)

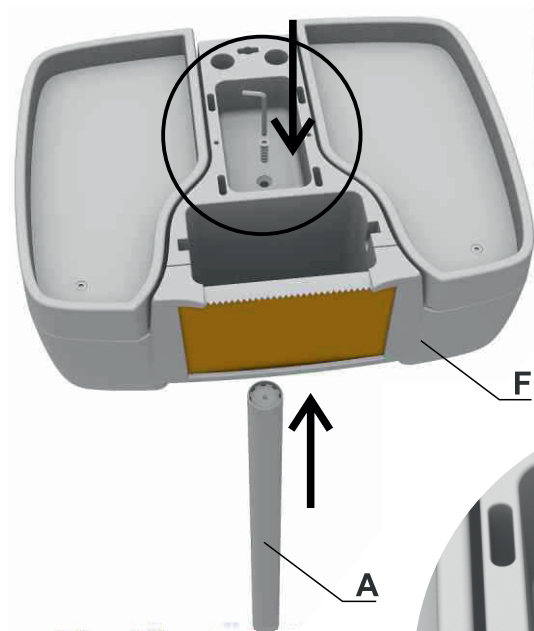



- A) Pole
- C) Screw M8
- E) Hexagonal wrench n.5
- F) Body

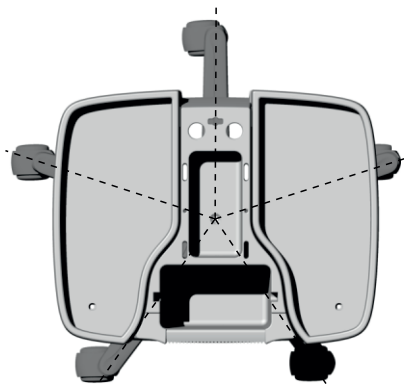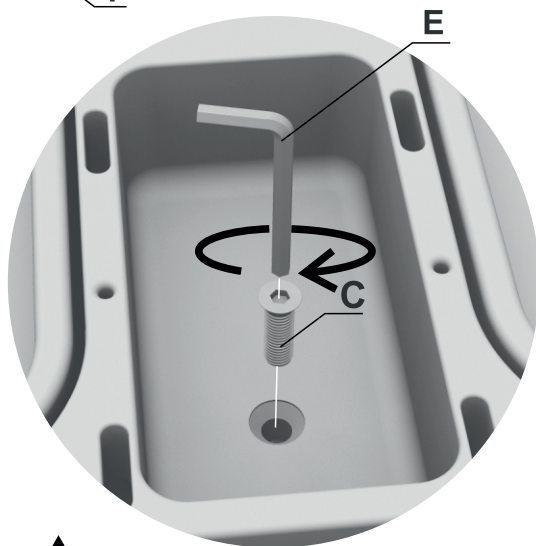

**Recommended Base Positioning**


3

The trolley is equipped with two types of front panels, G1 for the color version, G2 for cutting, choose the favourite version (color or cut) and insert the relative front panel.

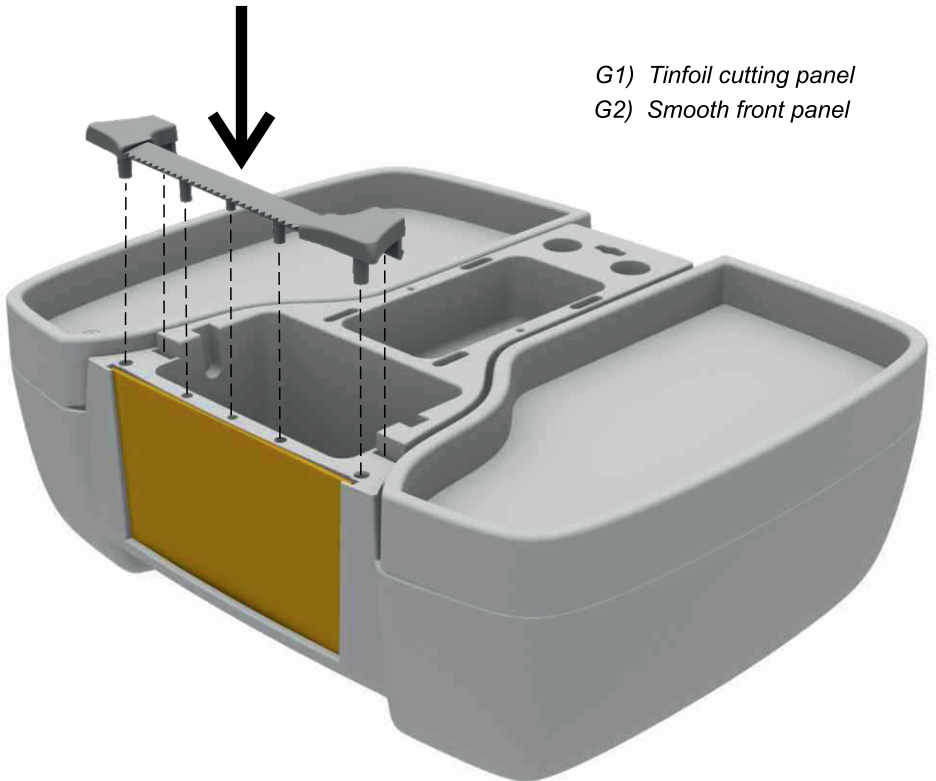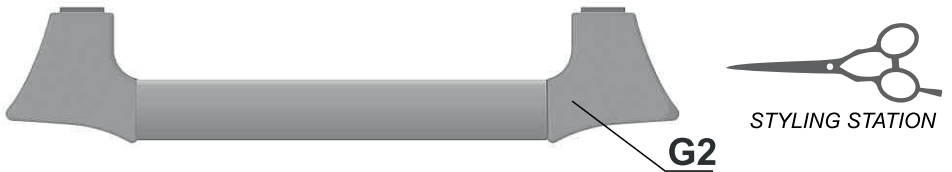


4

It is possible to adjust the friction of the two rotating trays by acting on the two screws with the key (E) supplied in the way indicated in the detail. In both cases, work progressively with minimum adjustments, max a quarter of a turn in both directions.

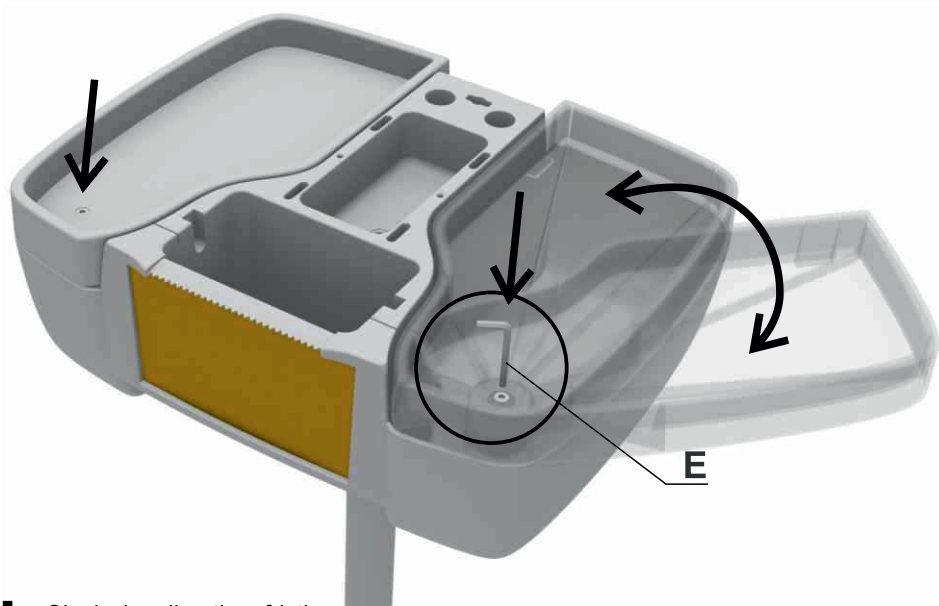


**+** Clockwise direction, friction more rigid



**-** Anti-clockwise direction, softer friction.

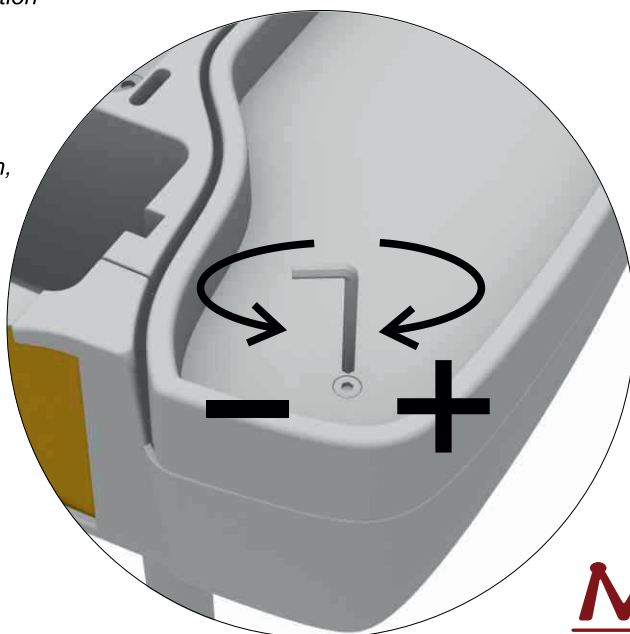


- 5 The Beauty Case trolley allows the use of aluminum rolls up to the diameter 8 X 14 CM. Insert the roll into the slot and tear off the desired quantity.

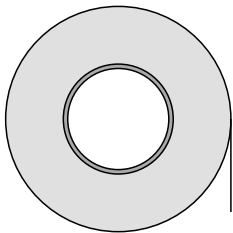

Max Ø Inch 3,15 H 5,51 Inch

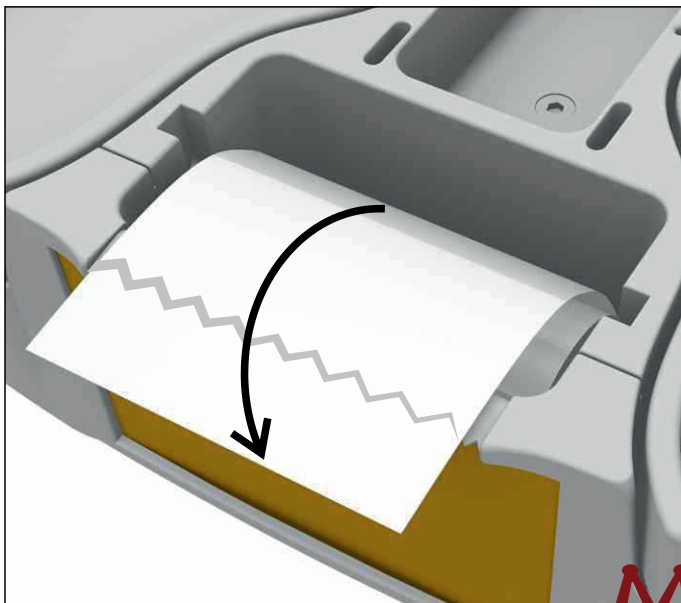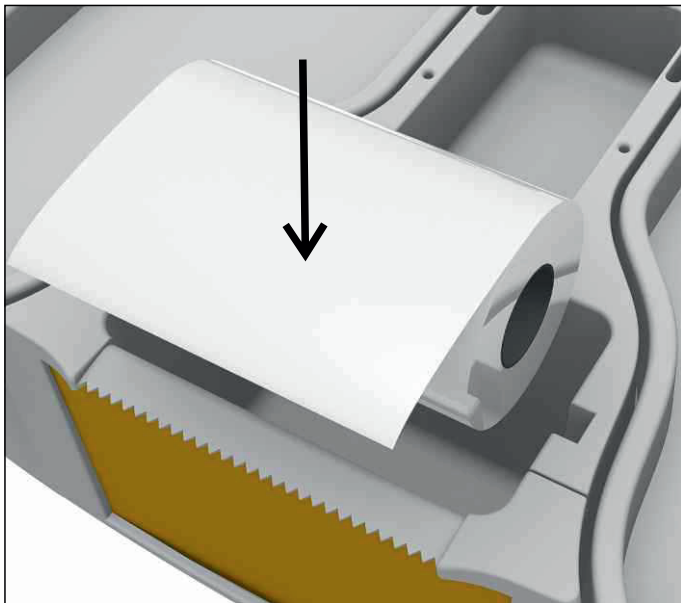

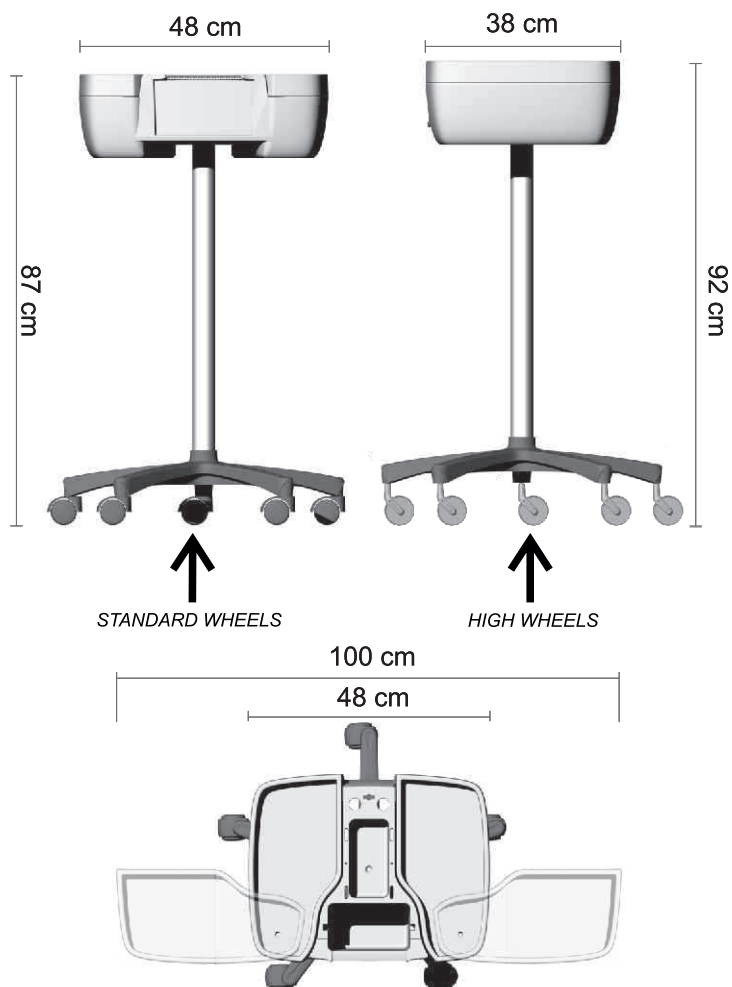



**Minerva Beauty, Inc.**

390 Jim Daws Road

P.O. Box 828

Monroe, GA 30655

Toll Free: 1-888-332-0123

Local: 678-584-9734

Fax: 678-584-5338

E-Mail: [sales@minervabeauty.com](mailto:sales@minervabeauty.com)